Notes on these Operating Instructions

We have structured these Operating Instructions for the installation so that you will be able to look up the necessary subject-related information by means of the Contents List at any time.

> **Note**
>
> You will find comprehensive Operating Instructions for navigation on relevant CDs/DVDs and at the online help of the device.

Read the section "Frequently Asked Questions" to obtain answers to questions that are often addressed to our customer service.

Document Your Navigation Unit

It is important to document the details of your Navigation Unit purchase in the event you need warranty service. The serial number can be found on the back of the device:

Serial Number	.....
Password	.....
Information note	.....
SuperPIN	.....
UUID	.....
Date of Purchase	.....
Place of Purchase	.....

Take the serial number from the type plate on the back or the underside of your device. Also transfer the number into your guarantee documents, if necessary.

You will enter the password and the information note by means of the Security Function. You will receive the SuperPIN and the UUID after the activation of the Security Function.
See Page 23.

Quality

In selecting the components we have aimed for a high level of functionality, simple handling, safety and reliability. A well-balanced hardware and software design allows us to offer you a technologically advanced navigation system that will give great satisfaction in both work and leisure use.

Service

Our individual customer care is there to support you when you have questions or problems. Please get in touch – we look forward to helping you. This manual contains a special section on Customer Service starting on page 74.

Copyright © 2007, version 06/12/07. All rights reserved. Microsoft®, MS-DOS®, and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium® is a registered trademark of Intel Corporation. The names of actual companies and products mentioned herein may be the trademarks of their respective owners. Information in this document is subject to change without notice.

Contents

Safety and Maintenance 1
Safety Instructions 1
Data Security 1
Operating Environment 2
Repair 2
Ambient Temperature 2
Electromagnetic Compatibility 3
Connection 4
Power Supply through Car Adapter 4
Power Supply through AC adapter (optional) 4
Cabling 4
Information about the Regulatory Compliance according to R&TTE 5
Battery Operation 5
Maintenance 6
Care of the Display 6
Recycling and Disposal 6
Transport 7
Supplied Items 8
Views 9
Front Components 9
Back Components 10
Bottom Components 11
Top Components 12
Right Components 12
Left Components 13
Holder with extension socket (optional) 14
Front components 14
Back components 15
Initial Set-up 16
I. Charging the Battery 16
II. Power Supply 17
Car Adapter 17
Alternative possibility of charging the battery 17
AC Adapter (optional) 18
III. Switching on the Device 19

IV. Installing the Navigation Software 20
General Operating Instructions 21
Switching On/Off the Device 21
Security 23
Fingerprint Sensor 23
Benefits of this technology 23
Storing the password and the information note 23
Making settings 25
SuperPIN and UUID 26
Saves changes in the security function 26
Storing a fingerprint 27
Changing the settings of a stored fingerprint 29
Description of the Interfaces 29
Making subsequent settings 30
Password interrogation 31
Resetting the Navigation System 32
Reset 32
Switching the Device off Completely / Hard Reset 32
Navigation 33
Safety Instructions for Navigation 33
General Instructions 33
Notes for Use in a Vehicle 34
Additional Notes for Use on a Bicycle or a Motorcycle 34
Aerial Orientation 34
I. Mounting the Car Holder 35
II. Attaching the Navigation System 36
Fixing the navigation system via cradle with extension socket 37
III. Connecting the Car Adapter 38
IV. Starting the Navigation Software 39
Warning function for traffic monitoring points 40
Integrated FM Transmitter (optional) 42
Starting the FM Transmitter 42
Main Screen Overview 42
Description of the Interfaces 43
Selecting the frequency 44
Speech commands (optional) 45

Handsfree Facility by means of Bluetooth (optional) 50
Starting the Bluetooth Application 50
Main Screen Overview 51
Pairing the Navigation Device and the Mobile Phone 52
Accepting incoming calls 53
Making Calls 53
MP3 Player (optional) 54
Main Screen Overview 54
Select a Title and Move it into the List of Favourites 56
List of Favourites 57
List of the established bookmarks 57
Picture Viewer (optional) 58
Operating the Picture Viewer 58
Main Screen 58
Full Image View 59
Video Player (optional) 61
Main Screen Overview 61
Selecting and playing video 61
Travelguide (optional) 63
AlarmClock (Wake up function) (optional) 64
Overview of the Main Screen 64
Description of the Interfaces 65
Setting the System Time 66
Selecting an Alarm Signal 66
Setting the Volume 67
Snooze Function 68
Ending the AlarmClock Application 68
Contact Viewer (optional) 69
Create the contacts database 69
Operating the Contact Viewers 70
Contacts list view 70
Visiting card view 71
Selection of addresses and phone numbers 72
FAQ 73

Customer Service 74
Faults and Possible Causes 74
Additional Support 74
Appendix 75
Special CleanUp Function 75
Synchronisation with the PC 78
I. Installing Microsoft® ActiveSync® 78
II. Connecting with the PC 79
Alternative possibility of charging the battery 79
III. Working with Microsoft® ActiveSync® 79
GPS (Global Positioning System) 80
External GPS antenna 80
TMC (Traffic Message Channel) 81
TMCPro (optional) 81
Installing the External TMC Receiver / Connecting the TMC Diplole Aerial (optional) 82
Working with Memory Cards 83
Inserting Memory Cards 83
Removing Memory Cards 83
Accessing Memory Cards 83
Data Exchange via Card Reader 84
Additional Card Material 84
Transfer of card material to a memory card 84
Alternative Installation of the Navigation Software from a Memory Card 85
Transferring Installation Files and Map Material to the Internal Memory 85
Mounting on (Bicycle) Handlebars (optional) 86
Specifications 87
Model Overview 88
Conditions of Warranty for the United Kingdom 89
Index 95

Safety and Maintenance

Safety Instructions

Please read this section carefully and follow all the instructions given. This will help ensure reliable operation and extend the service life for your appliance.

Keep the packaging and the user instructions for future reference or inquiries at a later date. If you pass the article on to another person, you must pass on these instructions.

- Never allow children to play with electrical equipment unsupervised.
- Keep the packing materials, such as foil away from children as there is a danger of suffocation.
- Never open up the housing of the appliance or the power adapter. These contain no user-serviceable parts. If the housing is opened there is a danger of electric shock.
- Do not place any objects on the appliance and do not exert any pressure on the display. Otherwise there is a danger that the screen will break.
- To avoid damage, do not touch the screen with sharp objects. Use only the stylus provided, a finger or another blunt implement.
- There is a risk of injury if the display breaks. If this should occur, use protective gloves to pack the broken parts and contact customer support to arrange for disposal. Then wash your hands with soap, since there is a possibility that chemicals may have escaped.

Remove the power adapter from the outlet, switch the appliance off immediately, or do not switch it on, and contact Customer Service...

- if the power adapter (optional) or the attached plug become scorched or damaged.
- if the housing of the appliance or the power pack (optional) becomes damaged or fluids leak into it. Components must be checked by Customer Service in order to avoid damage!

Data Security

- Every time you update your data make backup copies on an external storage medium. The supplier does not assume liability for data loss or damage to data storage units, and no claims can be accepted for damages resulting from the loss of data or for consequential damages.

Operating Environment

Failure to follow these instructions may lead to damage to your appliance. The guarantee will be excluded in such cases.

- Keep your navigation System and all connected devices away from moisture and avoid dust, heat and direct sunlight, especially in the car.
- Make sure you protect your appliance from getting wet, e.g. from rain and hail, at all times. Please pay attention that moisture can even build up in a protective pouch because of condensation.
- Avoid heavy vibrations and shaking, such as can arise, for example, in the case of transverse field intrusions.
- Install the device as vertically as possible to prevent the device from releasing itself from its holder.

Repair

- Please contact our Service Center if you encounter technical problems with your appliance.
- In the event repair becomes necessary, please use only our authorized Service Partners. You will find the address on the back of your guarantee card.

Ambient Temperature

- The appliance is most reliably operated at an ambient temperature of between 41°F and 104°F (5°C and 40°C) and at a relative humidity of between 10% and 90% (non-condensing).
- In the powered down state the appliance can be stored at between 32°F and 140°F (0°C and 60°C).
- Store the appliance in a safe location to avoid high temperatures (e.g. when parking or from direct sunlight).

Electromagnetic Compatibility

- When connecting additional or other components the “Electromagnetic Compatibility Directive” (EMC) must be adhered to. Please also note that only screened cable (maximum 10ft) should be used with this appliance.
- For optimal performance, maintain a distance of at least 10 ft. from sources of high-frequency and magnetic interference (televisions, loudspeaker systems, mobile telephones etc. This will help avoid malfunctions and loss of data.
- Electronic devices emit electromagnetic waves during operation.
  These emissions are harmless, but can interfere with other devices operated in close proximity.
  While our devices are tested and optimized for electromagnetic compliance in our laboratories, interference during operation may still occur in the device itself and with other devices in its proximity.
  Should such interference occur, try to eliminate it by adjusting the positions of and the distances between the devices.
  Before driving a car, please ensure that the electronic systems of the car are working properly.

Connection

When connecting your appliance be sure to correctly observe the following instructions:

Power Supply through Car Adapter

- The car adapter should only be connected to the lighter socket of a car (car battery = DC 12V ⎓, truck battery = DC 24V ⎓!). If you are in any doubt about the power source in your car, contact your car manufacturer.

Power Supply through AC adapter (optional)

- The outlet must be in the vicinity of the appliance and must be easily accessible.
- To disconnect your appliance from the power source, remove the mains adapter from the power socket.
- Only use the mains adapter on sockets at AC 100–240 V~ AC, 50/60 Hz. If you are unsure about the power supply to the place of use, ask the relevant energy supplier.
- Use only the power adapter provided with your appliance.
- Do not cover the power supply unit, in order to avoid damage through unacceptable warming.
- Stop using the power supply unit if the housing or the feed line to the device is damaged. Replace it with a power supply unit of the same type.
- For additional safety, we recommend the use of a surge protector in order to protect your appliance from damage from spikes or lighting strikes on the power network.

Cabling

- Arrange cables so that no-one can tread on them or trip over them.
- Do not place any items on the cable.

Information about the Regulatory Compliance according to R&TTE

The following radio equipment has been supplied with this device (optional):

- Bluetooth (only in the case of model 4425)

The company declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Complete declarations of conformity are available under www.medion.com/conformity.

CE 0984

Battery Operation

Your appliance is operated with a removable battery. In order to prolong the life and efficiency of your battery and to ensure safe operation, follow the instructions below:

- Batteries cannot withstand heat. Avoid overheating of the appliance and the integrated battery. Failure to comply with this instruction may lead to damage to and even explosion of the battery.
- Use only the original power pack (optional) to charge the battery or the car adapter from the optional navigation kit.
- The batteries are special category waste. When disposing of the appliance ensure that this is done correctly. Contact Customer Service for more details.

Maintenance

Attention!

There are no user-serviceable or cleanable parts inside the housing of the appliance.

You can prolong the life of the appliance by taking the following simple steps:

- Always remove the power plug and all connecting cables before cleaning.
- Clean the appliance only with a damp, lint-free cloth.
- Do not use solvents, caustic or gaseous cleaners.
- The device and its packaging are recyclable.

Care of the Display

- Avoid scratching the display surface as this is easily damaged. It is strongly recommended to use a display protection mylar to avoid scratches. Please ask your nearest dealer for this accessory.
  The foil on the display at delivery is purely for protection during transportation!
- Ensure that no traces of water remain on the screen. Water can cause irreversible discoloration.
- Use only a soft, lint-free cloth to clean the screen.
- Do not expose the screen to either strong sunlight or ultraviolet radiation.

Recycling and Disposal

Device

At the end of its life, the appliance must not be disposed of in household rubbish. Enquire about the options for environmentally-friendly disposal with your local waste disposal company.

Packaging

To avoid damage during transport, the PC is stored in a packaging. Packaging is produced mostly from materials which can be disposed of in an environmentally friendly manner and be professionally recycled.

Transport

If you wish to transport the appliance follow the instructions below:

- Following transport of the appliance wait until the unit has acclimatized before using it.
- In the case of wide fluctuations in temperature or humidity condensation or moisture may form inside the appliance and this can cause an electrical short-circuit.
- In order to protect the appliance from dirt, knocks and scratching, use either the protective case.
- Before travelling ensure that you are aware of the power and communications provision at your destination. Before travelling obtain any power or communications adapters that may be needed.
- When shipping your appliance use only the original packaging and advise the carrier accordingly.
- When passing through the hand luggage control at airports, it is recommended that you pass the appliance and all magnetic storage media (external hard drives) through the X-ray system (the machine on which you place your bags). Avoid the magnetic detector (the structure through which you yourself pass) or the magnetic wand (the hand device that the security staff use), since this may corrupt your data.

Supplied Items

Please check the integrity and completeness of the supplied items and, if it is not complete, forward us any possible claims within 14 days from the purchase date. The purchase package includes:

- Navigation system
- Power cable for cigarette lighter
- Car holder and jacket (or holder with extension socket)
- CDs/DVDs with navigation software, digital maps, ActiveSync®, PC application for restoring data quickly
- Instruction manual and warranty card

Optional

- AC adapter
- External GPS antenna
- Memory card MMC/SD
- USB cable
- Holder with extension socket
- Earphones
- TMC dipole antenna
- External TMC receiver
- Bicycle fixture
- Protective case

Views

Front Components

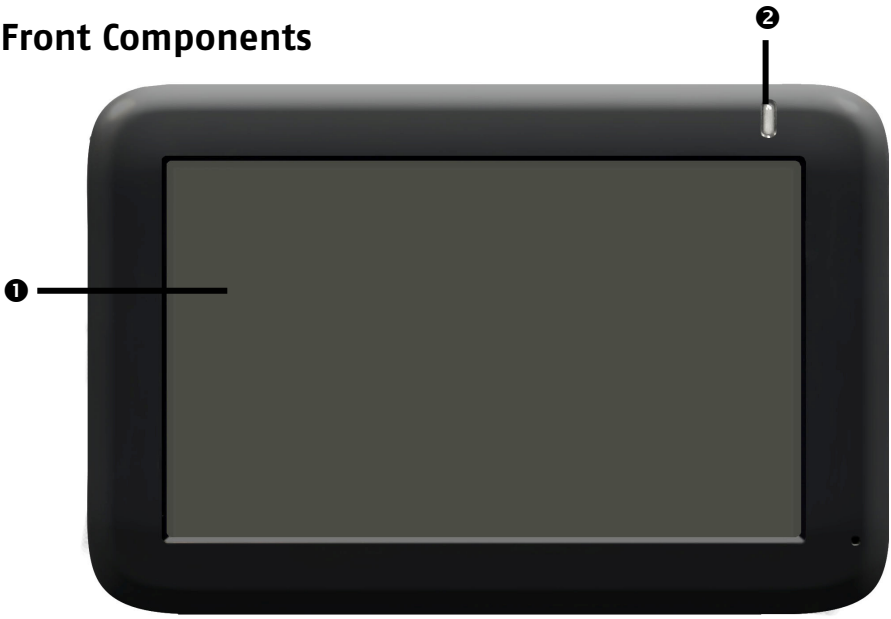

Ref	Component	Description
❶	Touch Screen	Displays the output of your appliance. Tap on the screen with your finger, a stylus or a "blunt" tip to select menu commands or enter data.
❷	Battery charge indicator	The loading display will flash **red** during the charging process. It will shine **green** when the accumulator is completely charged in the case of model nos. E4125 and P4225. The LED will fade after the end of the charging process in the case of model P4425. The LED will flash blue here in the case of an active Bluetooth function (model P4425).

Back Components

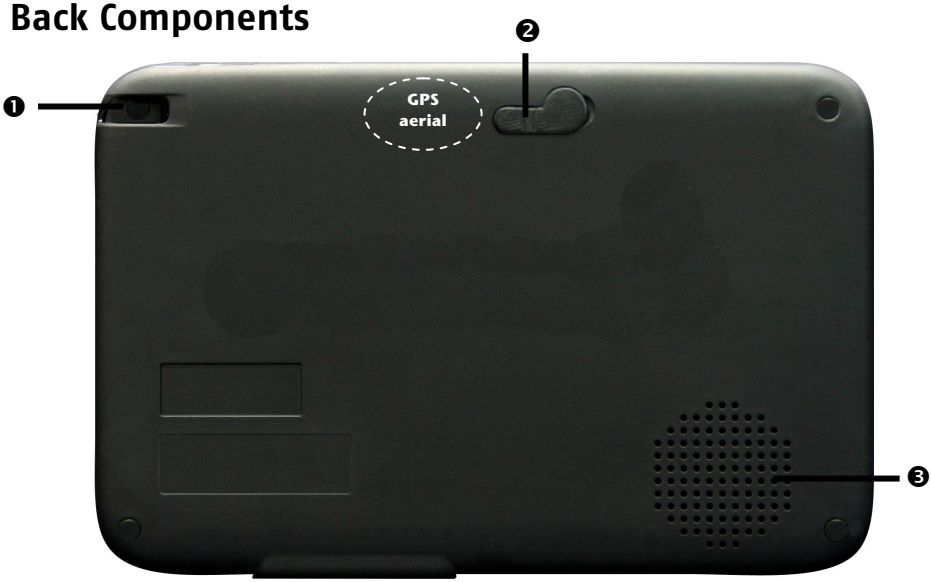

Ref	Component	Description
❶	Stylus	Take the pen out of its compartment in order to use it, and replace it after use. The pointer pen is required for operating the touch screen.
❷	External aerial connection	Connection for an optional second aerial.
❸	Loudspeaker	Plays back language statements and warnings.

Bottom Components

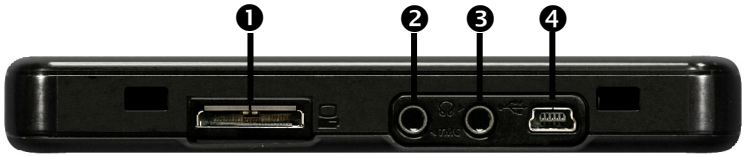

Ref	Component	Description
❶	Extension socket	For the expansion for future components (as a connection socket for additions to the system) e.g. for operation of the optional holder , see page 14).
❷	TMC Connector	You also have the possibility to connect a TMC dipole antenna here (only for models P4225 and P4425)
❸	Earphone connector	Connects to a pair of stereo headphones (3.5 mm). Using this appliance at full volume for extended periods of time may cause damage to the hearing capacity of the listener.
❹	Mini-USB-Connector	Connection for connecting to a PC by means of a USB cable (for data matching) as well as connection to external power supply) You also have the possibility to connect an external TMC receiver here (only for the model E4125, see page 82).

Top Components

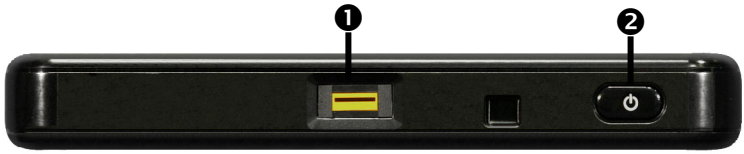

Ref	Component	Description
1	Fingerprint Sensor	For authentification
2	On/Off switch ⏻	Switches the device on or off (standby mode).

Right Components

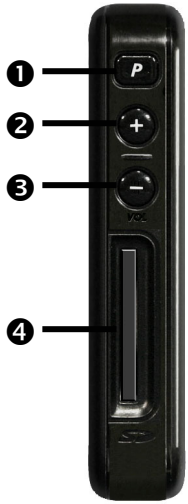

Ref	Component	Description
1	Function button	
2	Button +	Increase the volume
3	Button -	Decrease the volume
4	SD/MMC Slot	Accepts an **optional** SD (Secure Digital) or MMC (MultiMediaCard) card for removable storage.

Left Components

Ref	Component	Description
❶	Main switch	Switches the device completely off (Hard Reset).
❷	Reset opening	Restarts your appliance (Reset, see page 32). Perform the reset as follows: Press the tip of the stylus into the reset switch opening or insert a pointy object (e.g. a paper clip, which has been bent open) with slight pressure into the reset opening.

Holder with extension socket (optional)

This holder offers extended connection possibilities and has in addition an installed TMC aerial and an FM transmitter (see Page 42) for the transfer of speech announcements or music to a car radio.

Front components

Ref	Component	Description
❶	Holding clip	
❷	Extension socket	Connection plug to the main device

Back components

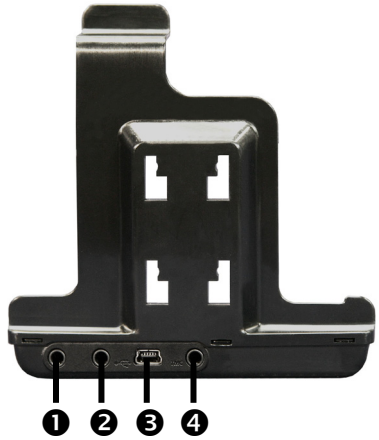

Ref	Component	Description
❶	Earphone connector	Connects to a pair of stereo headphones (3.5 mm). Using this appliance at full volume for extended periods of time may cause damage to the hearing capacity of the listener.
❷	Microphone	For connection of an external microphone (only fort he model P4425)
❸	Mini-USB-Connector	Connection for connecting to a PC by means of a USB cable (not for data matching or connection of an external TMC receiver!)
❹	TMC Connector	Connector for a TMC dipole antenna (Serves to improve the reception in the case of the P4225 and P4425 models, if no reception or only long-lasting inadequate reception is possible through the TMC aerial installed in the holder.)

Attention!

Pay attention that the contacts are not touched, contaminated or short-circuited.

Initial Set-up

The following guides you step by step through the initial Set-up of the navigation system.
Firstly, remove the foil from the display.

I. Charging the Battery

You have the following possibilities to charge the battery of your navigation system:

- by means of the car adapter,
- by means of the USB cable (optional) or
- by means of the AC adapter (optional).

> **Attention!**
>
> It can be necessary to recharge the battery for some time initially before it is possible to run through the initial installation, according to the state of charging of the battery installed.

Please pay attention to the following notes when handling the battery:

- The charging status display flashes **red** until the navigation system is charged. If possible, do not interrupt the charging process before the battery is fully charged. This may take a few hours. It will shine **green** when the accumulator is completely charged in the case of model nos. E4125 and P4225. The LED will fade after the end of the charging process in the case of model P4425.
- You can use the navigation system during the charging process, but the power supply must not be interrupted during initial set-up.
- Leave the external power supply connected to the navigation system for around 24 hours, so that the backup battery also charges-up fully.
- You can leave the external power supply connected, and this is very handy for continuous operation. However, the mains adapter (optional) also requires power even when it is not charging up the battery of the navigation system.
- It can take several minutes until the device is ready to operate again, following the connection of the external power supply, if the charging state of the battery is very low.
- The battery can be charged while the device is switched off completely.

II. Power Supply

Car Adapter

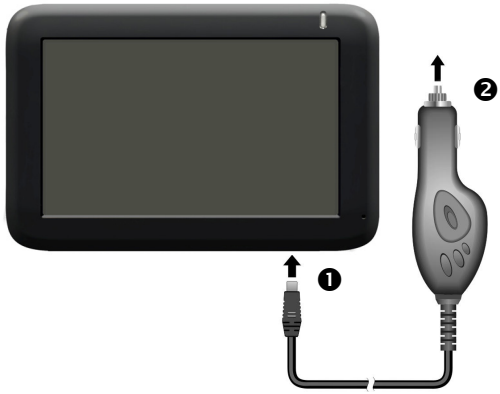

(similar picture)

1. Plug the jack (❶) of the connection cable into the corresponding receptor at the bottom of your navigation system.
2. Insert the power adapter (❷) into the cigarette lighter socket and ensure, that it will not lose contact while driving. This could cause a malfunction.

Alternative possibility of charging the battery

The battery will charge as soon as you connect your navigation device to a switched-on PC or notebook by means of a USB cable (optional). No type of software or drivers installation will be necessary for this. Do not interrupt the charging process if possible during the initial bringing into operation.

AC Adapter (optional)

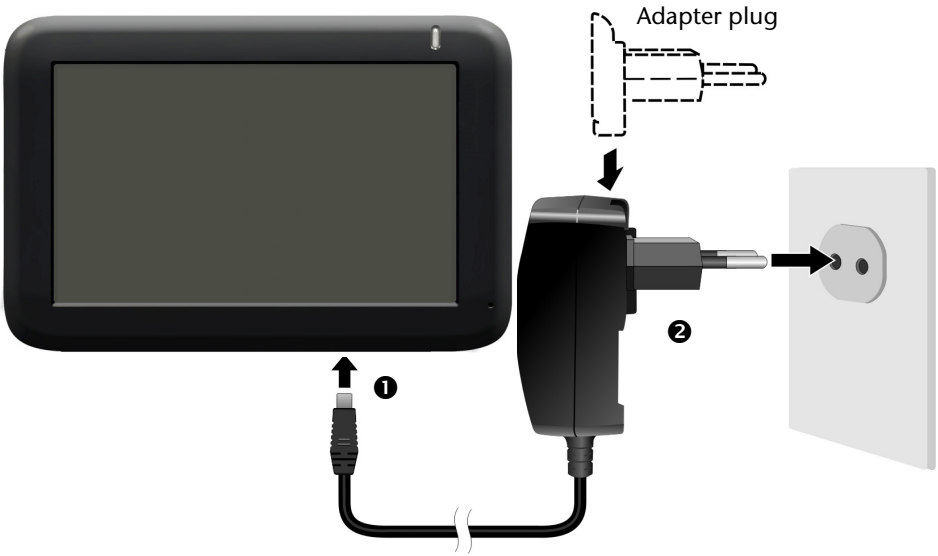

(similar picture)

1. Push the adapter connector into the guide on the back of the AC adapter. Press the push button at the same time, so that the adapter plug can engage.
2. Plug the cable of the mains adapter (❶) into the mini-USB connection on of the navigation system.
3. Push the AC adapter (❷) into a power point that is easily accessible.

III. Switching on the Device

Switch the main switch to **ON**.

> **Attention!**
>
> Always leave the main switch in the ON position, unless you want to carry out a new reinstallation. If the main switch is in the OFF position, all data will be deleted in the temporary memory.

The Navigation System will start the initial installation automatically. The brand logo will appear and your device will display the application screen after a few seconds.

Button	Description	Main Screen
	Navigation, page 33	
	Travelguide, page 63	
	MP3 Player, page 54	
	Handssfree facility, page. 50	
	Contact Viewer , page 64	
	AlarmClock, page 64	
	Picture Viewer, page 58	
	Videoplayer, page 61	
	Settings	
	Next page of the main screen	
	Previous page of the main screen	

Note

Brief pressure on the **on/off button** will be enough to switch the device on or off, provided that your navigation system is connected to an external source of electricity or is running in battery operation (standby mode).

To switch your navigation system completely off, push the on/off button at the bottom of the device to the **OFF** position.

No data will be lost during this because of the storage of data in the internal memory. The starting process will only last slightly longer.

Your device is delivered in a state in which it will not switch off itself automatically, when it is switched on and not being used. You can adjust the operating time of your device to your requirements by means of the **Settings** button on the main screen.

Your navigation system will use a low amount of electricity and the batteries will be discharged, even when it is in the standby mode.

IV. Installing the Navigation Software

The final installation of the navigation software will take place automatically from the internal memory, during the initial setting up, if your device has already been equipped with the basic data of the navigation software at the factory. Follow the instructions on the screen.

An optional memory card must always have to be inserted in the device while the navigation system is being used.

It will be necessary to carry out a Reset to restart the navigation system if the memory card has been removed (see page 32).

Please also read the chapter **Navigation** starting on page 33.

General Operating Instructions

Switching On/Off the Device

Your device will be in its normal operating state after the initial setting up. You can activate and deactivate your device with the On-/Off switch.

1. To start your navigation system press briefly the On-/Off switch ⏻.

> **Note**
>
> Your device is delivered in a state in which it will not switch off itself automatically, when it is switched on and not being used. You can adjust the operating time of your device to your requirements by means of the **Settings** button on the main screen.
>
> Your navigation system will use a low amount of electricity and the batteries will be discharged, even when it is in the standby mode.

2. To switch off your navigation system press briefly the On-/Off switch ⏻. (standby mode):

You have three possible choices now here:

Button	Description
	Cancel/Back Return to previous view with this key, if you have accidently called up this screen.
	Standby Mode The device will go into Standby Mode if this key is clicked.
	Reset You will carry out a Reset by clicking this key.

The device will go into the Standby mode automatically after a few seconds if you do not want to select any of these three possibilities.

For further settings within the Standby mode also see chapter Special CleanUp Function, page 75, point 8.

This display will also appear after the delay period of a few seconds has expired, if you have activated the DC AutoSuspend Comfort Function.

Security

You have the possibility of protecting your device against external access by means of this function. Some one-off settings will have to be made before you will be able to use this function. Proceed as follows to do this:

Fingerprint Sensor

Your new navigation system is equipped with a **fingerprint sensor**.

Benefits of this technology

First of all, it provides extra **comfort**. You will not have to memorize passwords, because the software manages those for you. The program remembers and saves all input that is necessary for authentication purposes. By your fingerprint the program recognizes that you are authorized to retrieve and transmit the login data.

> **Note**
>
> Store your passwords and access data in a safe place. If you cannot identify yourself by your fingerprint (e.g., when working on someone else's computer), you can log in with your access data in the usual way.

Storing the password and the information note

1. Go to the settings by means of the main display.
2. Click on **Security**, in order to start the respective function. The following display will appear:

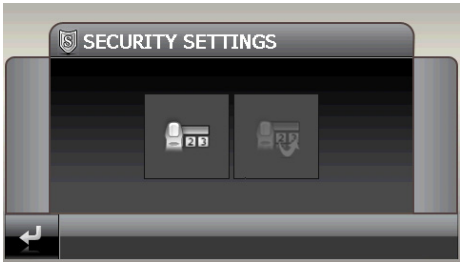

3. Click on the left interface, in order to enter a password.

4. Click on the first field. A keyboard will appear. Enter a password with it.

> **Note**
>
> The password must consist of at least 4 symbols. Use a combination of letters (A-Z and numbers (0-9) for it. Keep the password in a safe place.

5. Confirm the password with the symbol after you have entered it.
6. Enter the password in the second field to reconfirm it and in order to avoid potential careless mistakes.

> **Note**
>
> The password will be displayed in the form of small stars (****).

7. An additional text field will appear after you have entered the password. Enter an information note here that will serve as a support for remembering your password. You will be able to call up this information if you have forgotten or mislaid the password.

Making settings

The following selection window, though which you will make the settings for the Security Function, will appear after you have entered the password and the information note successfully.

Button	Description
	Set here whether the device should interrogate the password after a hard reset.
	Set here whether the device should interrogate the password after a restart.
	Set here whether the device should interrogate the password after the device has been switched on from the Standby mode.
	Switch off the password interrogation temporarily for all eventualities (hard reset, restart or standby) by means of the icon. The interfaces will be faded out and the icon next to it will appear.
	Confirm the settings made here.

SuperPIN and UUID

The SuperPIN and the UUID (Universally Unique IDentifier = definite device identification) will appear on the display after you have made the settings.

Note

Record this data in your Operating Instructions (see Page 1) and keep them in a safe place.

You will need this information if you have entered the password incorrectly 3 times. The navigation device can then only be released with this information.

Saves changes in the security function

You will be asked whether you would like to store the changes in the Security Function after you have noted and confirmed the SuperPIN and the UUID.

- Save your changes with .
- All the settings made will be rejected with the symbol and the **Security Settings** display will appear.

Storing a fingerprint

An overview of the fingerprints stored will be displayed in the following display. You will be able to add fingerprints by means of the symbol if no fingerprints have been stored yet or more fingerprints are intended to be stored.

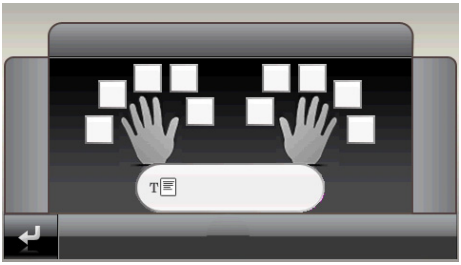

1. Choose the desired finger:

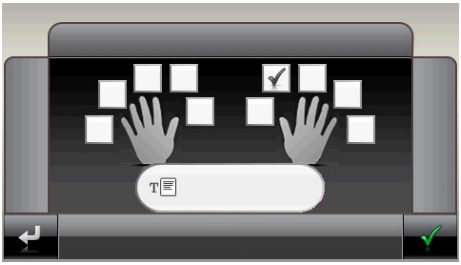

2. Click on the text entry interface, in order to enter a welcome text:

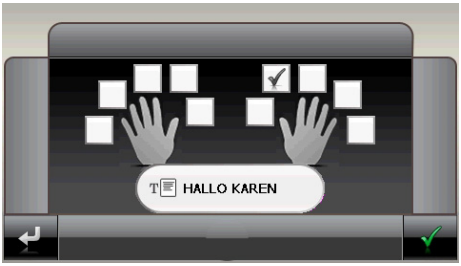

3. Confirm with .

4. The welcome text will be displayed in the text entry box. Click on the symbol, in order to continue with entering the fingerprints. The following display will appear:

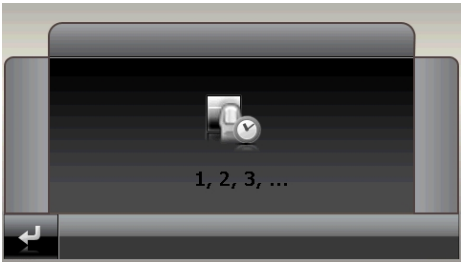

5. Now, draw the finger previously selected (fingertip) across the sensor on the upper surface of the device **three times** slowly and horizontally within a few seconds.
   The symbol will appear after this has been done successfully
6. Confirm with .

Note

The symbol will appear in the case of incorrect execution or the non-recognition of the fingerprint. Repeat Point 4. Click on to do this

The fingerprint stored will appear in the overview:

Changing the settings of a stored fingerprint

Proceed as follows in order to deactivate a fingerprint displayed in the overview temporarily or to delete it:

1. Click on the fingerprint required in the overview. The following display will appear:

Description of the Interfaces

Button	Description
	Changing the welcome text
	Back
	Deactivate fingerprint (temporarily)
	Delete fingerprint
	Confirmation

Making subsequent settings

Start the Security Function if you have already entered a password and would like to make a subsequent setting or to change the password. The following display will appear:

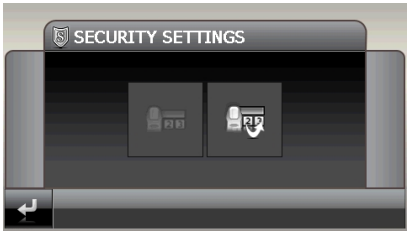

1. Click on the right field to make changes.
2. Enter the current password. Click on the question symbol if you have forgotten the password. The information note entered by you will appear.

> **Note**
>
> Please pay attention to the fact that the keyboard is necessary in the case of this password entry.

3. The following display will appear if you have entered the password successfully:

Button	Description
	Leave Security Function
	Making settings (see page 24)
	Enter password (see page 23) / Store fingerprint (see page 27)
	Enter information note (see page 23)
	Show SuperPIN and UUID (see page 26)

Password interrogation

A password interrogation will appear at the restarting of the device, according to the setting, if you have established a **password** or a **fingerprint** by means of the Security Function.

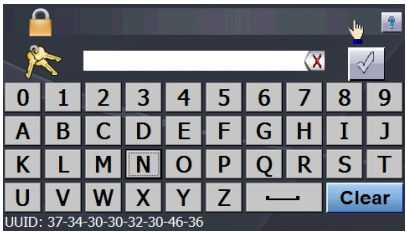

1. Enter the password stored by you by means of the keyboard or draw the finger (fingerprint) previously chosen by you across the sensor on the upper side of the device. The welcome text will appear first and your display will display the application screen after a few seconds, if you deposited a welcome text during the storing of your fingerprint.

   Note

   The password will be displayed in the form of small stars (****).

2. Click on the question symbol to have the information note displayed, if you have forgotten the password and need the Help setting.
3. Click on the tick to confirm the entry.

   Note

   You will have to enter the SuperPIN if you have entered the password incorrectly 3 times. Contact your Service Center, giving the UUID, if you have also mislaid it. The UUID will be faded out in the lower display.

Resetting the Navigation System

You will have the possibility of resetting your navigation system if it is no longer reacting or working properly.

This option restarts the navigation system, without reinstallation being necessary. A reset is often used in order to reorganize the memory. In doing so all programs that are running are interrupted and the working memory is reinitialized.

You have two possibilites to reset your device.

Reset

The following screen will appear if you press the On/Off switch for a short time:

If you want to carry out a Reset, tap on .

You will find further information in chapter Switching On/Off the Device, page 21.

Switching the Device off Completely / Hard Reset

> **Attention!**
>
> A hard reset will delete all data in the temporary memory.

Your navigation system will normally be in the Standby Mode, if you have switched it off by pressing the on/off button briefly. In addition, the system can be switched off completely; the consumption of energy can be kept as low as possible through this. All the data in the temporary memory will be lost if the device is switched off completely (hard reset).

Switch your navigation system off completely in this way:

1. Push the **Main switch** to the position **OFF** to swich the device off.
2. Push the **Main switch** to the position **ON** agian to carry out the Hard Reset.

A reinstallation will be necessary after a hard reset if your device has already been equipped with the basic data of the navigation software in the permanent memory at the factory.

Navigation

Safety Instructions for Navigation

The bundled product CD/DVD contains a comprehensive instruction manual.

General Instructions

- Do not manipulate the navigation system while driving to protect yourself and others from accidents!
- In the event that you do not understand the voice instruction or if you are in any doubt about what to do at the next intersection, then the map or arrow display will provide you with a quick orientation. Only look at the display when you are in a safe driving situation!

Legal remark

The use of devices that warn for traffic monitoring systems (like „speed traps") is prohibited in some countries, like Austria, Germany, Ireland and Switzerland. Please obtain information about the legal situation and apply the waning function only where allowed. We cannot be held liable for damages caused by the use of the warning function.

Attention!

The road layout and driving rules take precedence over the instructions of the navigation system. Only follow the instructions when circumstances and driving rules permit it! The navigation system will guide you to your destination even when you have to deviate from your planned route.

- The direction statements of the navigation system given do not release the driver of the vehicle from his or her duty of care or personal responsibility.
- Plan routes before you leave. If you want to plan a new route whilst on the road pull over and stop driving.
- In order to receive the GPS signal correctly, keep away from metal objects as they may hinder reception. Attach the navigation system onto the inside of the windscreen or near the windscreen with the suction cup. Try out different positions in your vehicle in order to find the best reception.

Notes for Use in a Vehicle

- Take care that the holder does not present any risk to safety, even in the case of an accident, when installing it.
- Take care that the cable does not impede any safety components.
- The display of your navigation system may show “light reflections”. Please take care of not being “blinded” during operation.
- Do not mount the components within the operating range of any airbags.
- Check the secure adherence of the suction cup at regular intervals.
- The power plug will consume power, even if no device is connected. Remove it when not in use to avoid draining the car battery.
- Check all safety equipment in your car after installation.

> **Note**
>
> Do not leave your navigation software in the vehicle when you leave it. You should also uninstall the holder for security reasons.

Additional Notes for Use on a Bicycle or a Motorcycle

- Pay attention during installation that the ability to steer is not impaired.
- Do not cover any instruments during installation.

Aerial Orientation

The aerial must have unrestricted access to the sky to receive GPS satellite signals. Orient the aerial as horizontally as possible for this reason. Try out aerial and installation possibilities in the vehicle in the case of inadequate reception. It may be necessary to install an external GPS antenna (see page 80) under certain circumstances.

I. Mounting the Car Holder

Attention!

Only fix the holder for the navigation system to the windscreen, if it does not impede the view. Should this not be possible, then mount the holder in any way that will allow peril-free and safe operation.

(similar picture)

Note

Clean the disk thoroughly with a glass cleaner. Warm the disk and the nipple slightly at temperatures below 15° C.

Place the holder with the suction head directly onto the wind screen and press the lever on the suction head downwards. The sucker will attach itself to the background firmly.

II. Attaching the Navigation System

1. Connect the car adapter (see page 17) and, if necessary, the external GPS aerial, to your navigation system and insert the memory card.
2. Place the device below in the centre of the holder and press it gently backwards until it engages audibly.
3. Place the holder on the fixing catches of the car holder.
4. Now, push the unit **downwards** until it engages audibly.
5. Now you will be able to place the complete unit on the cleaned windscreen or the suction plate.

(similar picture)

Fixing the navigation system via cradle with extension socket

(similar picture)

1. Connect the car adapter (see page 17) and, if necessary, the external GPS aerial, to your navigation system and insert the memory card.
2. Place the device on the expansion plug from above and press it down into the holder carefully and press it gently backwards until it engages audibly.
3. Place the holder on the fixing catches of the car holder.
4. Now, push the unit **downwards** until it engages audibly.
5. Now you will be able to place the complete unit on the cleaned windscreen or the suction plate.

III. Connecting the Car Adapter

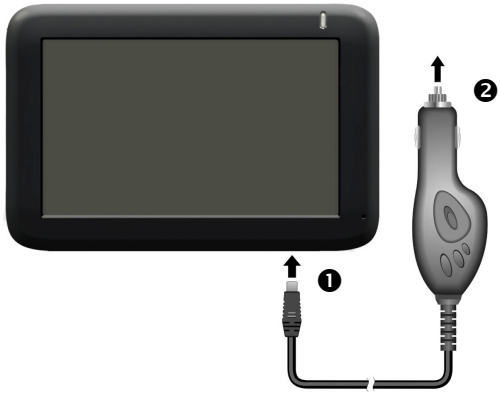

(similar picture)

1. Plug the jack (❶) of the connection cable into the corresponding receptor of your navigation system (or, if available, into the cradle with extension socket).
2. Insert the power adapter (❷) into the cigarette lighter socket and ensure, that it will not lose contact while driving. This could cause a malfunction.

> **Note**
>
> Remove the power adapter from the cigarette lighter socket when ending a trip or when parking the car for a extended period of time. Otherwise the car battery could be drained. In this case use the power switch to turn off the navigation system.

IV. Starting the Navigation Software

Note

The map material will always have to be stored in the device during the use of the navigation system if your memory card contains such (additional) material.

It will be necessary to carry out a reset to restart the navigation system if the memory card has been removed while the system was being used (see page 32). According to the navigation system the reset is carried out automatically.

1. Switch on your navigation system.
2. The Navigation software will start automatically or after tapping on the navigation control button on the main screen, according to the version.
3. Tap on **Navigation** on the screen for entering the destination and enter the address of your navigation destination. Confirm your entry by clicking the ✓ symbol to start the navigation. You will receive the route information on the screen, augmented by language statements, after a short time, if the satellite reception is adequate.

Further information regarding the navigation software can be found in the **comprehensive manual on your navigation CDs/DVDs**. This is a pdf-file you can read and print with the any Acrobat Reader.

Note

The GPS-receiver will require some minutes for initialization when deployed for the first time. Even when GPS signal reception is indicated the navigation could be imprecise. In all future instances it will take about 30-60 seconds until a correct GPS-signal is available, sufficient “sight” of the satellite is a prerequisite.

Warning function for traffic monitoring points

The following display will appear if the warning function for traffic monitoring points (optional) has been installed:

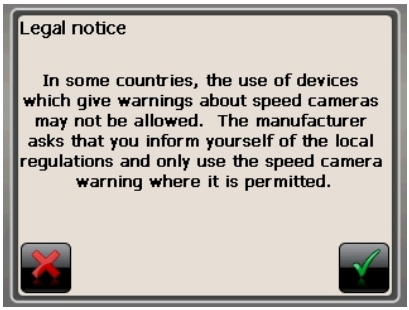
Legal notice
In some countries, the use of devices which give warnings about speed cameras may not be allowed. The manufacturer asks that you inform yourself of the local regulations and only use the speed camera warning where it is permitted.

Confirm with , if you want to use navigation with the warning function for traffic monitoring points.

Click on the **Configure special destinations** interface in the **Settings** Menu, in order to configure the warning function.

The following screen appears:

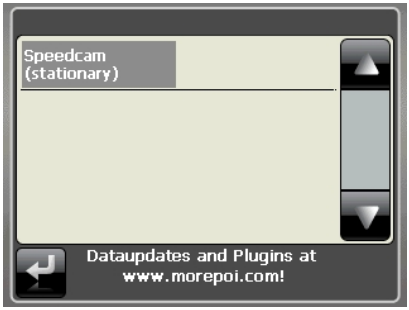

Click on **(Radars) fixes** here, in order to make the settings for the ‘radar fixes’:

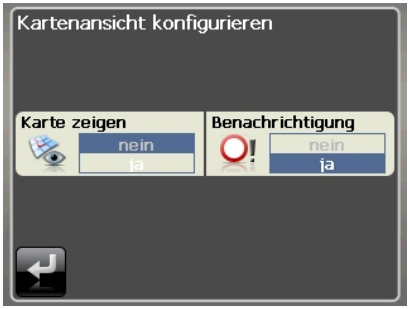

Here, you have the option of having the traffic monitoring points represented on a map or faded out. You can also set whether you would like to be informed by acoustic signals before reaching a traffic monitoring point here.

Acoustic information about a traffic monitoring point will be given by a warning sound approx. 15 seconds before it is reached. Then, another double warning sound will be given approx. 7 seconds before it is reached. Four warning sounds will give information that the speed is too high. In addition, the distance to a monitoring point will be indicated by a bar indicating closeness (left lower edge of the display).

Sample view if map presentation has been activated:

Note

Please pay attention to the fact that traffic monitoring points are not present in all countries.

*** Legal remark**

The use of devices that warn for traffic monitoring systems (like „speed traps”) is prohibited in some countries, like Austria, Germany, Ireland and Switzerland. Please obtain information about the legal situation and apply the waning function only where allowed. We cannot be held liable for damages caused by the use of the warning function.

Integrated FM Transmitter (optional)

Your navigation system will be equipped with an FM transmitter (UKW transmitter with a weak transmission performance) in the holder according to the version (see Page 14).

The optional holder and the power supply through the cigarette lighter will be necessary for the use of the FM transmitter. You will be able to transmit navigation announcements and other audio announcements from the navigation system to the car radio without a cable with the aid of the FM transmitter.

> **Legal remark**
>
> The use of an FM transmitter is forbidden in some countries. Please obtain information about the legal position and only use this function where it is permitted. We shall not be liable for damages arising from the use of this device.

Starting the FM Transmitter

To start the FM Transmitter, tap on ⇨ **Program Settings** ⇨

in the navigation menu.

Main Screen Overview

Description of the Interfaces

Button	Description
	Volume control (exclusively FM transmitter control)
	To swith the FM Transmitter on/off
	Reactivate the FM transmitter (reactivation notification when the device is inserted into the holder)
	Setting the frequency (see page 44)
	Activates/deactivates the sample piece of music for the setting in the radio.
	Back

Selecting the frequency

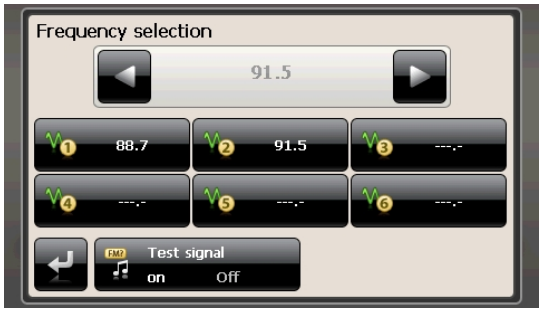

You can set the required radio frequency (UKW) here with the and the interfaces.

Note

Move to a different frequency (through the radio transmitter, for example) if the use of the frequency is overloaded. You have the possibility of storing up to six different frequencies.

1. Proceed as follows, in order to store the frequency currently set:
2. Choose the desired frequency.
3. Click on this interface longer, in order to allocate the respective frequency to a specific channel position. The following display will appear:

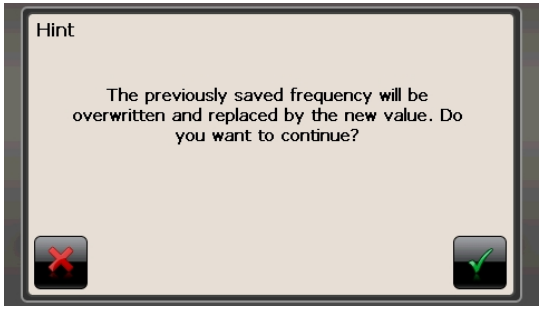

4. Confirm with .

Speech commands (optional)

The Speech Entry mode can be activated by means of the function during navigation. A short information sound will indicate that the navigation system is ready for the speech entry.

Explanation of the symbol:

- ( ) optional words;
- „/“ Alternatives;
- < > Content displayed can be spoken

The following commands will be possible here according to the current view:

Always applicable/global commands	
	Back • Cancel | abort dialog • Enter new city | select new city • Enter new destination | select new destination • Enter new ZIP | select new ZIP **Help** General Help | Commands • Map view **volume settings | change volume** • Decrease volume • Increase volumemute volume • Unmute volume **Menu / Main Menu**
In the case of lists, either or	• <an entry> • <number of entry>

Valid commands ...	

... in the main menu	• Favorites |stored destinations
	  • <LastEntry1>
	  • <LastEntry2>
	  • Last locations
	  • Enter new destination | new destination
	  • Route information
	  • stop route guidance
	• Tour planning
	• Other applications| additional applications
	• Points of interest
	• Settings

... in the target entry screen (in the respective operating step)	• Enter city | select town • Enter coordinates | select coordinates • Enter country | select country • Enter number | select number • Middle of road • Enter street | select street • City center • Keyboard • Repeat | repetition • Select ZIP | enter postcode • Navigation
... in the case of confirmation questions	• No • Yes | okay • Accept
... in the application menu	• Contacts | addresses • Travel guide • M P 3 | MP3 Player • Navigation | navi • Other applications | more aaplications • Telephone | Phone • Picture viewer

... if lists are displayed	• Next page | scroll down • Previous page | scroll up • Delete all last locations • delete <an entry> • delete <number of entry>
... in the case of intersections	• Hide map • Show map | display map
... in the case of detailed information about Favourites	• Rename favourite • Place as favourite
... in the case of a faded in telephone number field	• Telephone | Phone
... in the case of the last line/ special line/line entry of detailed information	• Place as favourite • Route options
... in the case of all detailed information	• Start route guidance
... in the case of Favourites	• Delete all favourites • New favourite
... in the map view	• Display destination | display destination area • Display map | display overview • Display position | display current position • Turn icons view | manoeuvre view • View direction of motion | view driving direction • Compass view | G P S view • 2D North | 2D view • Only map | normal view • Splitted map | arrow and map • 2 d perspective | 2D map • 3 d perspective | 3D map • Dynamic view | dynamic map

	• Zoom in • Zoom out
... in the case of route options	• Economic route • Fast route • Short route
... in the case of POIs	• Along the route • At a certain place • At destination • Nearby
... in the case of route information	• Block route • Directions • Go to • Route simulation • Traffic information
... during the entry of towns and streets (according to the operating step)	• City center • Middle of road • Stop route guidance • Help • Back • Points of interest

... in the case of settings	• Application settings • Decrease signal volume | signal volume down • Increase signal volume | signal volume up • Decrease M P 3 volume | | M P 3 volume down • Increase M P 3 volume | | M P 3 volume up • Decrease speech volume | speech volume down • Increase speech volume | speech volume up • Device configuration • Map settings | display settings • POI | points of interest • By pass • Ferries • No Ferries | avoid Ferries • Use Ferries • Motorways • No motorways | avoid motorways • Use motorways • Routenoptionen / Routeneinstellungen • Toll roads • No toll roads | avoid toll roads • Use toll roads • Route type • Short / fast / economic • Type of vehicle • TMC

Note

Speak the commands loudly and clearly in the direction of the navigation system. No incidental noises (radio, ventilation or loud conversation) should arise during the speech entry.

Handsfree Facility by means of Bluetooth (optional)

The Bluetooth technology serves to bridge short distances wirelessly. Bluetooth devices transmit data wirelessly, so that other devices that also support this technology can communicate with each other without cables.

Both devices will have to be adjusted to each other (pairing), before you will be able to use your navigation system as handsfree equipment with your Bluetooth mobile phone.

> **Note**
>
> Please read how you switch on the Bluetooth function in the Operating Instructions of your mobile phone.

Starting the Bluetooth Application

1. Tap on the option **Bluetooth**.

   > **Note**
   >
   > Bluetooth will be reactivated and the Bluetooth LED will flash because of the operation of this interface, if Bluetooth has been deactivated manually.

2. Now the main Bluetooth screen will appear on your navigation device.

Main Screen Overview

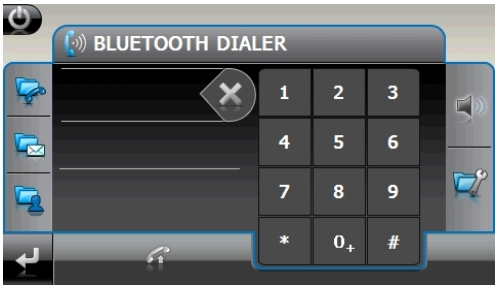

Button	Name	Description
	Exit	Leave the application by means of this field.
	Course of call	Displays the course of calls put through and received.
	News	View the postbox of your mobile phone through this symbol. You will be able to receive, write and send messages.
	Telephone Book	Call the contacts stored in the mobile phone through this symbol. The support of this function depends on the respective mobile.
	Back	Previous Page of the main display.
	Delete	Delete the number entered by means of the keyboard with this field.
	Calling	Select the number entered by means of the keyboard with this field.
	Keypad	Enter the digits of the telephone number to be called by means of the keyboard.
	Volume	Set the volume of the microphone and the loudspeaker by means of this symbol.
	Settings of the hands-free facility	Pairing – Link the navigation device to the mobile
		Settings for automatic SMS synchronization between the navigation device and the mobile phone
		Settings for automatic synchronization between the navigation device and the mobile phone
		Setting of the basic volume of the microphone and the loudspeaker.

Pairing the Navigation Device and the Mobile Phone

1. Activate the Bluetooth function on your mobile phone.

> **Note**
>
> Each mobile phone uses different paths to do this. Read the instructions of your mobile phone under all circumstances for this reason.

2. Select the option (Pairing – link the navigation device to the mobile phone) under the settings of the open speech facility of your navigation device. The search for a Bluetooth-enabled device will start.
3. Select the corresponding mobile phone from the list.
4. Start the link by operating the **Pair** field.
5. Your mobile phone will recognize the navigation device. You will be requested to enter a 4-digit PIN code. This is 1 2 3 4 for your navigation device.
6. Your mobile phone will be recognized and the open speech facility through the navigation system will now be available to you.

> **Note**
>
> This procedure will have to be repeated as soon as you have switched off the navigation system or a spatial separation between your mobile phone and the navigation device arises.

Accepting incoming calls

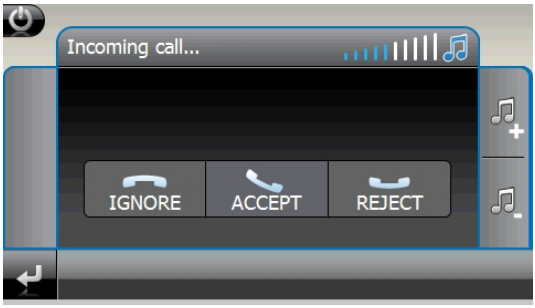

Button	Description
	Ignore calls
	Accept calls
	Reject/terminate calls

Making Calls

1. Tap on the keypad in the main Bluetooth screen and enter the number that you wish to call.
2. Start the call with .

MP3 Player (optional)

Depending on the software equipment your navigation system is equipped with a **MP3 Player**.

Start the MP3 player from the main screen by tapping the **MP3 Player** button. Alternatively, the MP3 player can also be started from the navigation software itself.

All the MP3 files located on the memory card can be taken over into a List of Favourites and will be ready to be played.

Main Screen Overview

Button	Description
	Close the application
	Opens the List of Favourites
	For the title selection
	Changing the mode of playing: **Normal**: Plays all the files in their sequence and stops after the last file. **Shuffle**: Plays a file selected at random. **Repeat**: Repeats the current file continuously. **Repeat all**: Plays all the files in their sequence and will restart from the first file, after the last one has been played.
	Display of the current Reproduction mode

Button	Description
	Reduces the screen brightness to a minimum, to save electricity.
	Determine/add bookmarks
or	Increase or decrease the volume. The display in the upper right corner of the screen will show the current level of the volume.
	Break off action / Back to the previous menu
or	Move to the previous or next file. It will be possible to skip backwards or forwards within the title playing while it is being played
	Play the playback.
	Stop the playback.

Select a Title and Move it into the List of Favourites

Tap on and select the title that you would like to move into the List of Favourites, in order to select a title.

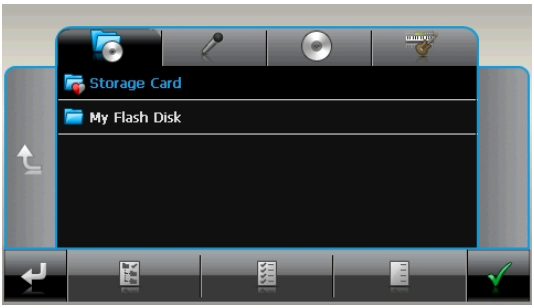

You will have three possibilities of marking the title here:

- Tap on in order to mark all the titles, including all sub-directories.
- Tap on in order to mark all titles currently in view.
- Tap on to delete all marks within a directory.

The selected titles will be indicated by a .

Tap on , in order to confirm your selection. The titles marked will not be moved into the List of Favourites **until then**.

Tap the file required and select the requisite title, in order to select a title in the sub-directories.

The symbol will be shown if not all the titles in a directory have not been selected.

List of Favourites

You will reach the List of Favourites by tapping on the :

1) Bright Eyes 03:33
2) 02 Das Foucaultsche Pendel 20:05
3) Nichts von alledem (tut mir leid) 04:26
4) Summer Sunshine 02:53
5) Not Too Late 03:31

you will delete all titles with .

You will delete individual titles with .

Confirm with , in order to take over the new selection into the List of Favourites.

List of the established bookmarks

You will reach the list of the established bookmarks by clicking on the symbol :

You will delete all bookmarks with the symbol.

You will delete an individual bookmark with the symbol.

Operation with the symbol to take over a new selection into the list of bookmarks.

Picture Viewer (optional)

Depending on the software equipment your navigation system is equipped with a **Picture Viewer**.

You can view the jpg format images on your memory card on your navigation system, with the **Picture Viewer**. All the images on the memory card will be available immediately.

Operating the Picture Viewer

Start the **Picture Viewer** from the main screen by tapping on the **Picture Viewer** button. Alternatively, the Picture Viewer can also be started from the navigation software itself.

Main Screen

Fig.: Miniature view

Move the miniature view to the left or to the right with the **arrow keys**. Tap on a specific images to display it in the Full Image Mode.

Return to the start in miniature view by tapping on .

You can end the application by tapping on the symbol.

Start the **slide show** by tapping the symbol.

Full Image View

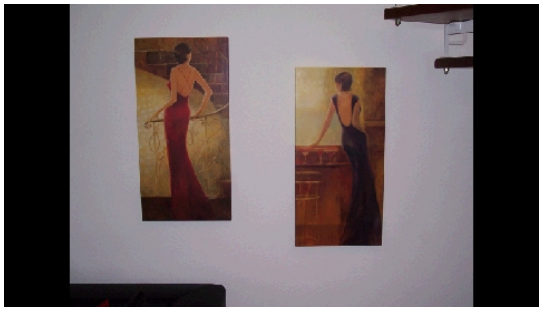

Fig.: Full image view without service strip

Tap in the **lower** area of the screen in the full image view, in order to activate the **service strip**:

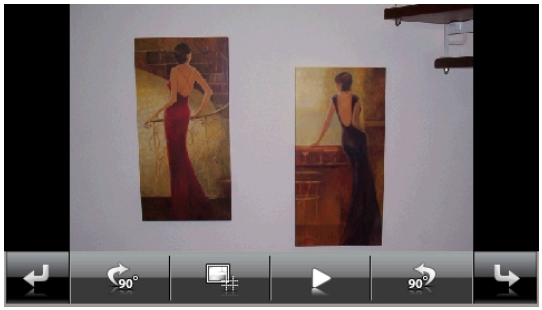

Fig.: Full image view with service strip

Button	Description
	Previous picture
	Turn it clockwise by 90° in stages
	Fade in grid
	Start the slide show Pause the slide show
	Turn it counter-clockwise by 90° in stages
	Next picture

You will return to the miniature view by tapping in the centre of the image.

The image displayed will be subdivided into 6 fields by tapping on the symbol (fade in grid).

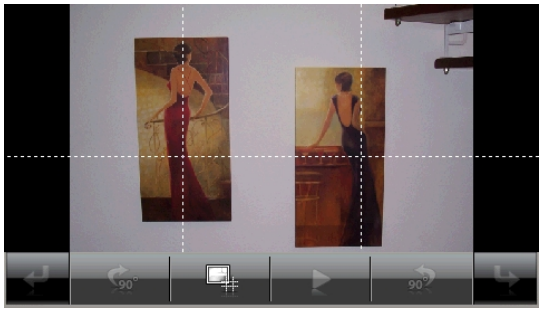

Fig.: Full image mode with grid

Tap on a square in the grid to zoom in on that area of the picture:

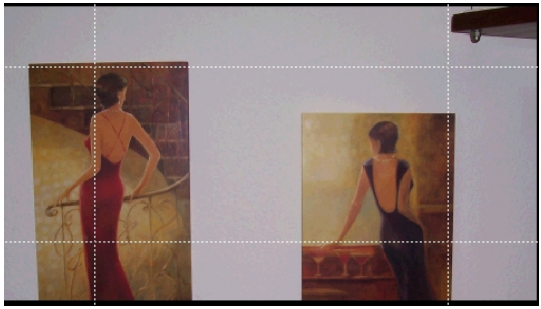

Fig.: Zoom-in Mode

Tap on the centre of the image to go back to viewing the full picture.

Video Player (optional)

Depending on the software equipment your navigation system is equipped with a **Video Player**.

Start the Video Player from the main screen by tapping the **Video Player** button.

Main Screen Overview

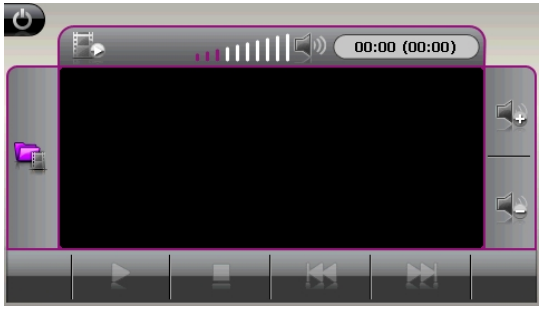

Selecting and playing video

Tap on on the main screen to open the file explorer:

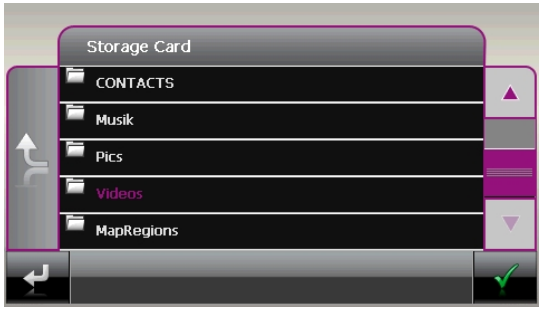

Select the desired video and confirm with :

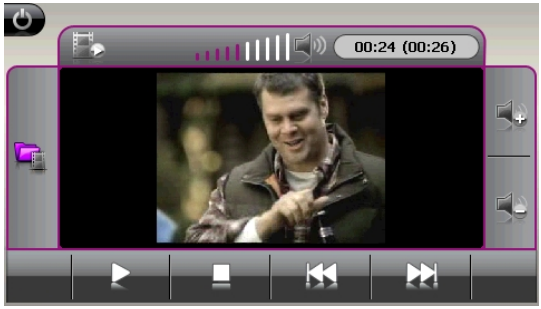

Button	Description
	Forward / Backward
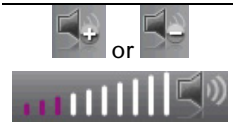	Increase or decrease the volume. The display in the upper right corner of the screen will show the current level of the volume.
	File Explorer
	Play the playback.
	Pause the playback.
	Stop the playback.
	Confirming an action
	Return to the previous menu.
	Close Video player.

Travelguide (optional)

Depending on the software equipment your navigation system is equipped with a **Travelguide**.

The Travelguide will supply general information about the different areas of individual towns and cities or regions in Europe, such as sights, restaurants, culture and travel information.

Start the **Travelguide** from the main screen by tapping the **Travelguide** button. Alternatively, the **Travelguide** can also be started from the navigation software itself.

Select the **country** initially, then the **town** or **city** (or the **region**). Then, select the category.

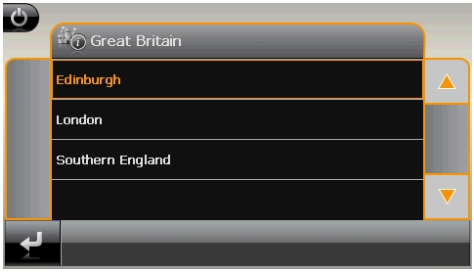

Fig. 1

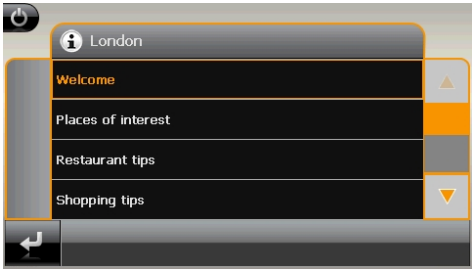

Fig. 2

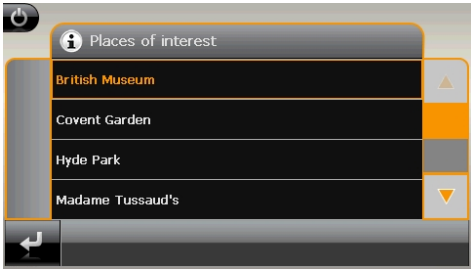

Fig. 3

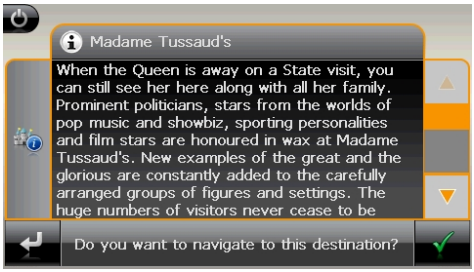
Madame Tussaud's
When the Queen is away on a State visit, you can still see her here along with all her family. Prominent politicians, stars from the worlds of pop music and showbiz, sporting personalities and film stars are honoured in wax at Madame Tussaud's. New examples of the great and the glorious are constantly added to the carefully arranged groups of figures and settings. The huge numbers of visitors never cease to be
Do you want to navigate to this destination?

Fig. 4

Confirm with if you want to navigate to the destination displayed. The address will then be available to the navigation software as the destination.

> **Note**
>
> You will be able to vary the possibilities of selection within the Travelguide, according to the software provided.

AlarmClock (Wake up function) (optional)

Depending on the software equipment your navigation system is equipped with a an **AlarmClock/ Wake up function**.

Start this function from the main screen by tapping on the **AlarmClock** button.

The waking function can work both as a normal when the device is switched off (Standby Mode / Power Saving Mode) and as a reminder during the current navigation.

Overview of the Main Screen

This view will appear if you have not yet set up a waking time. Enter an alarm time in the **24-hour format** and confirm your entry with .

Description of the Interfaces

Button	Description
	Current system time
	Setting-up mode (Setting volumes, system time and alarm)
	Night mode (Standby mode)
	Reset/deactivate the waking function
	Setting the alarm time
	Delete the entry
	Confirmation interface
	Reduce the volume
	Increase the volume
	Back to the previous menu
	Close the application

Setting the System Time

The display of the current time will be located in the upper right corner of the screen. You can adjust it as follows:

1. Tap on in the main screen. The following screen will appear:

2. Tap on to change the time setting.

> **Note**
>
> The system time is updated by GPS reception. Pay attention to the correct time zone setting during it.

Selecting an Alarm Signal

1. To select an alarm signal touch the symbol.

2. Select the desired alarm sound and confirm the selection with .
3. The selected alarm signal is marked by a .
4. Close the application with .

Setting the Volume

You can adjust the volume of the alarm signal by tapping on the interface.

Note

The volume configured here only relates to the alarm signal and will not change the volume of the language output of the navigation system or other functions of the system.

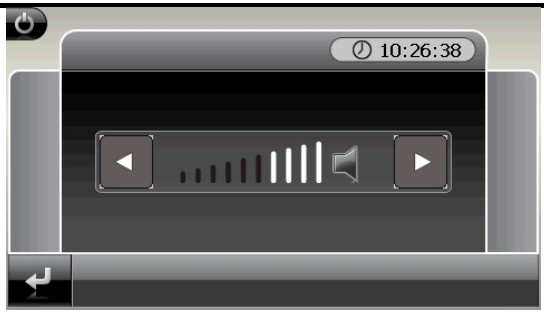

Snooze Function

You will have the possibility of making the waking signal repeat **at regular intervals** by means of the Snooze function, once it has sounded at the alarm time set.

Tap on to activate the Snooze function.

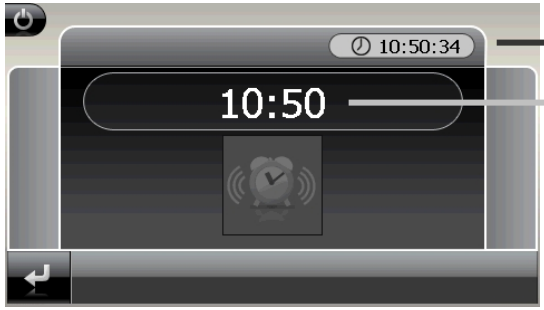

To be wakened again at the same time on the following day tap on the button. Bei

Tap on to return to the screen before the alarm signal started.

Ending the AlarmClock Application

1. Tap on to deactivate the alarm time set.
2. You will find yourself in the Setting-up mode.
3. Tap on in order to leave the application. An alarm time is not set.

Contact Viewer (optional)

Depending on the software equipment your navigation system is equipped with a **Contact Viewer**.

You will be able to create the contacts database (from Outlook 2003 or Outlook XP) and administrate your contacts with the **Contact Viewer**.

Create the contacts database

The Contact Viewer will search for the contacts database on your **storage card** and in '**My Flash Disk**', in order to deposit contacts. The '**contacts.db**' file must be present in the **contacts** sub-directory for this purpose:

- \Storage Card\contacts\contacts.db or
- \My Flash Disk\contacts\contacts.db

> **Note**
>
> The memory card must not be write-protected.

The more recent contacts database will be used if one is found both on the **Storage Card** and in **My Flash Disk**. The internal date (date of creation) will be decisive to the selection of the database.

You will be able to the export contacts from Microsoft Outlook with the Medion GoPal Assistant. Proceed as follows to do this:

1. Connect your navigation system to the computer or insert a storage card into your card reader.
2. Select the destination for the synchronization (memory card or internal memory of the device) in Gopal Assistant.
3. Select **Synchronize**.
4. Activate the **Export Outlook Contacts** Option.
5. Confirm with **Synchronize**.
6. The contacts database will be transferred to your navigation system.

Synchronisierung
Geplante Synchronisierung
Folgende Inhalte werden synchronisiert:
Name
Aktion
Typ
Größe
Beschreibung
Outlook-Kontakte exportieren
Größe unbek...
Liest Kontakte aus Ihrer Outlook e-mail Anwendung
Hinweis Das Übertragen großer Dateien über ActiveSync kann sehr lange dauern. Für große Datenmengen wird deshalb die Verwendung eines Kartenlesers empfohlen.
Bitte drücken Sie "Synchronisieren" um mit der Synchronisierung zu beginnen oder "Abbrechen", um den Vorgang abzubrechen.
Abbrechen
Synchronisieren

Operating the Contact Viewers

Start this function from the main screen by tapping on the **Contact Viewer** button.

Contacts list view

- Select the blocks of initial letters, such as ABC or DEF, with the buttons to the left and the right in the upper list.
- You can have all the contacts displayed by tapping the interface.
- The **LAST** Button displays the last 10 contacts selected and the contacts starting with a particular number will be displayed by tapping the **123** interface.

Visiting card view

The address and telephone number of the person currently selected will be displayed in the Visiting card view. You will be able to transfer the address to the navigation system and the telephone number to the mobile phone from here.

Tap on the light grey button with the address or the telephone number to do this. The following screen will appear:

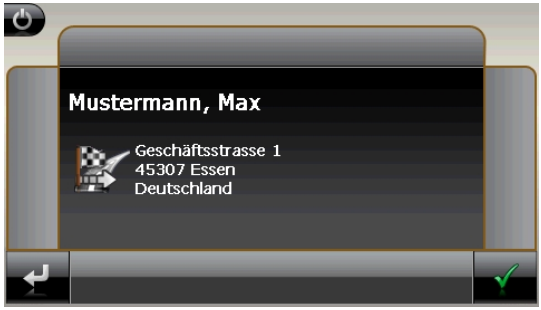

The address will be passed on to the navigation system and the destination guidance will be started by tapping on the interface.

The relevant button will not be displayed, if no address or telephone data have been stored for the contact.

You will return to the Contacts list view by tapping on the interface.

The symbols show the type of contact:

Symbol	Description
	General address without type information
	Private address
	Business address
	General phone number without type information
	private phone number
	Business phone number
	Mobile phone

Selection of addresses and phone numbers

It will be indicated by a dark grey arrow button, if several addresses for a contact are available. A list displaying all the address stored in relation to the selected contact will be displayed by means of this button. You will return to the Visiting card view by selecting an entry in the list. The address on the light grey button will be adjusted according to the selection.

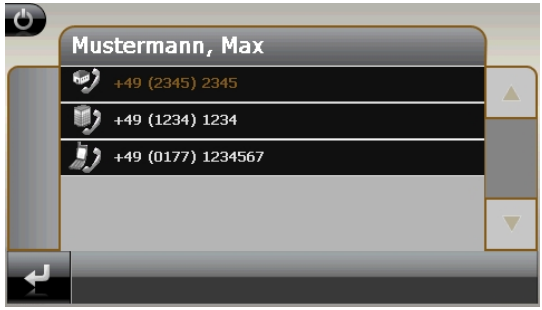

You will be able to select telephone numbers in the same way, if several of them are available for one contact.

You will return to the Visiting card view, without changing the old address, by tapping on the interface.

FAQ

Where can I find more information on the navigation system?

Detailed operating instructions for navigation can be found on the corresponding CDs/DVDs, which accompany your navigation system.

Also use the additional Help functions that are available with a single touch of a button (usually F1 on the PC), or by selecting the Help option, as additional assistance. These aids will be provided to you while you are using the computer or the device.

What do I need the accompanied CDs/DVDs for?

The CDs/DVDs contain:

- the ActiveSync® program for balancing data between the navigation system and the PC.
- Additional programs (optional).
- This User manual in digital form.
- digital maps
- PC-application for rapidly resetting the data material
- Manual of the navigation software

Depending on the configuration one or more CDs/DVDs may be included in the package.

The navigation system is no longer responding. What should I do?

Carry out a reset (see page 32).

How can I adjust the lighting?

Under Settings.

Customer Service

Faults and Possible Causes

The navigation system no longer reacts or is behaving atypically.

- Carry out a reset (see page 32).

The navigation system is recognized only as a guest by ActiveSync®.

- See information on page 79.

The GPS receiver cannot be initialized or found.

If a GPS signal continues not to be reported on the screen, in spite of the correct installation of the system, this can be caused by the following factors:

- Sufficient satellite reception is not possible.
  Solution:
  Change the position of your navigation system and ensure that unrestricted "sight" of the aerial is not impaired.

No language statements can be heard.

- Check the volume setting.

Additional Support

If the suggestions in the above section have not solved your problem, please contact our customer service hotline. However, before you contact your customer service hotline, please have the following information available:

- How is your navigation unit configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- If you have been given a customer number previously, please give this number to the technician.

Appendix

Special CleanUp Function

The CleanUp function serves the targeted deletion of data, without using a PC.

> **Note**
>
> Please use this function very carefully, because it is possible for data to be deleted that can only be entered again manually afterwards.

The CleanUp function is activated when the ‘o’ is pressed in the Gopal lettering of the Main Menu, immediately after the start tone following a reset.

The CleanUp function offers 8 options:

1. Remove Installation Only

Removes the software installed from the **‘My Flash Disk’** memory [= part of the permanent memory in which the executable parts of the navigation software will be located following the initial alignment (\My Flash Disk\Navigation)].

2. Remove MAP Only

Removes the digital maps from the **‘My Flash Disk’** memory (\My Flash Disk\MapRegions).

3. Remove Preload Only

Removes the data needed for the installation of the navigation software from the permanent memory (\My Flash Disk\Install).

4. Remove All

Deletes the whole contents of the **‘My Flash Disk’** memory. It will not be necessary to recalibrate the screen after this function has been carried out.

5. Factoryreset

Sets the device back to the delivery status in the case of an intact main installation.

6. Format Flash

Formats the internal '**My Flash Disk**' memory. This formatting can be necessary in the case of a prolonged removal of errors. It will be necessary to recalibrate the screen after the formatting function has been carried out. All data will be deleted from the internal '**My Flash Disk**' memory irrevocably.

7. Reset GPS

Performs a factory reset of the GPS receiver. When using the GPS function after having performed a factory reset, the GPS receiver must orientate itself again. This process may take a while.

8. DC AutoSuspend

You can select here when your navigation system should go into Standby mode automatically after the withdrawal of the external power supply. For example, this function is useful in the case of vehicles where the cigarette lighter also switches off when the ignition is switched off.

The AutoSuspend function will be activated several seconds after the discontinuation of the external power supply and the Standby display will appear for the time set (see Page 21).

The DC AutoSuspend function will be deactivated again if the power has been reconnected within the total period (in the case that the engine has been switched off for a short time, for example). Otherwise, the navigation system will go into the Standby mode after the expiry of the time set.

Set the required time by clicking on it and confirm your selection with OK.

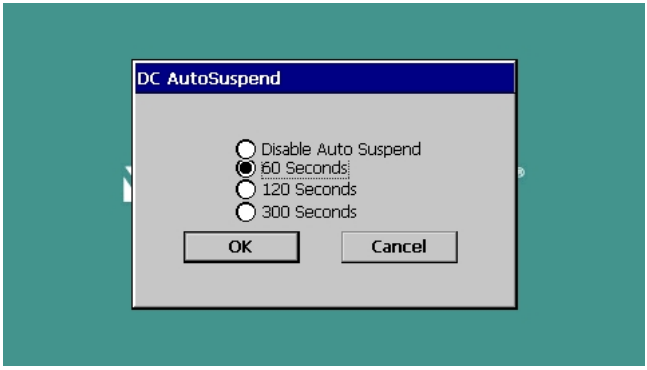

Note

This function is deactivated and can be set individually in the status at delivery and after a hard reset (see Page 32).

Exit

Leaving the CleanUp function and restarting the device (like reset).

> **Note**
>
> The deletion of the data must be confirmed before the action actually takes place. To do this, press on YES. There will be a corresponding report if the data to be deleted is no longer available.
> Please read the „**Transferring Installation Files and Map Material to the Internal Memory**“ chapter on Page 85, in order to recreate the files (installation files and map material) in the internal memory.

Synchronisation with the PC

I. Installing Microsoft® ActiveSync®

In order to transfer data between your PC and your navigation system you need the Microsoft® ActiveSync® program.

The cost of the navigation system includes a license for this program which can be found on the CDs/DVDs.

> **Hinweis**
>
> You will not need the ActiveSync® communications software, if you are a user of the Windows Vista® operating system. The system files necessary for the simple data transfer are already integrated into your Vista® operating system.
>
> **Procedure for Vista users:**
>
> Please connect your device to your PC with the help of the USB synchronization cable. The necessary drivers will be installed automatically, after the new device has been found. Your new device will be listed under the 'Portable Devices' point in the Windows Explorer overview, following a successful installation.
>
> **Attention!**
>
> Important files can be overwritten or changed during the installation of software. You should create a hard disk backup, in order to be able to have access to the original files in the case of possible problems following the installation.

You must have administrator rights to install the software under Windows® 2000 or XP.

> **Important**
>
> You should not connect the navigation system to your computer yet.

1. Insert the CD/DVD and wait until the program starts automatically.

> **Note**
>
> If it does not function, the Auto Run function is probably deactivated. The Setup program on the CD/DVD must be started, to start installation manually.

2. Choose the language, click then **Install ActiveSync®** and follow the instructions on the screen.

Note

When installing the GoPal Assistant, ActiveSync® will be installed automatically.

II. Connecting with the PC

1. Press the On/Off button to start your navigation system.
2. Connect the USB cable (**optional**) to your navigation system.
3. Push the USB connector into a free USB port on your computer.
4. The hardware installation assistant will recognize a new appliance and installs a suitable driver which can take some minutes. Repeat the die connection search if it fails the first time.
5. Follow the instructions on the screen. The program will now set up a partnership between your PC and the device.

Alternative possibility of charging the battery

The battery will charge as soon as you connect your navigation device to a switched-on PC or notebook by means of a USB cable (optional). No type of software or drivers installation will be necessary for this. Do not interrupt the charging process if possible during the initial bringing into operation.

III. Working with Microsoft® ActiveSync®

ActiveSync® will be started automatically if you connect your navigation system to the PC. The program will check whether the device is one with which a partnership has been entered. If this is the case, the changes that have taken place on the PC and on the navigation system since the last synchronisation will be compared and adjusted to each other. You will be able to define exactly which data will have priority during the synchronisation in the settings of the ActiveSync® Program. Call up the Help of the Program (with the F1 Button), in order to become familiar with the effects of the respective settings. A restricted **Guest Access**, with which you will be able to exchange data, for example, will become active automatically if the navigation system has not been recognised as a partner. If this is the case, although the process concerns the registered partner device, separate your navigation system from the PC and switch it off and on again. Now connect your navigation system to the PC, to restart the recognition process. Repeat the process and, restart your PC in addition, if your device continues to be recognised as a guest.

Note

Make sure that you always connect your navigation system to your PC with the same USB connection, otherwise your PC will allocate an additional ID and reinstall the device.

GPS (Global Positioning System)

GPS is a satellite-backed system for determining your position. With the help of 24 satellites revolving around the earth, it is possible to determine your position on earth with the accuracy of a few meters. The satellite signals are received by the antenna of the built-in GPS receiver, which must have a "line of sight" to at least 4 of these.

> **Note**
>
> When the line of sight (e.g. in tunnels, between houses, in woods or also in vehicles with metal-coated windows) it is not possible to determine the position. The satellite reception however automatically picks up again as soon as the obstacle has been passed and the line of sight is re-established. Moving slowly (e.g. slow walking) also limits the accuracy of the navigation.

The GPS receiver consumes additional power. This is especially of concern, when running on batteries. To conserve power do not turn on the GPS receiver unnecessarily. Also terminate the Navigation Software, if it is not needed or satellite reception is not possible for a longer period. However, you can also switch the device off by means of the On/Off switch in the case of a shorter interruption to your journey. Pressing the same switch again will activate a restart. The GPS receiver will also be reactivated at the same time, if navigation software is still active. Here, it can take a short time for the position to be updated again, according to the reception situation.

> **Note**
>
> Please note, that your appliance is preset to not shut down automatically after a few minutes without activity. You can change this preset in the Settings mode. If the GPS receiver has not been active for some hours, it must orientate itself again. This process may take a while.

External GPS antenna

This second optional GPS antenna makes it possible to receive the signals of satellites better (e. g. in the case of vehicles with a metallized windscreen).

1. The antenna should be pointing **upwards**.
2. Push the plug of the external GPS antenna into the opening provided for it.

TMC (Traffic Message Channel)

The **Traffic Message Channel** (**TMC**) is a digital radio data service that functions in a similar way to RDS and is used to transmit disruptions to traffic to a suitable reception device.

The traffic information is continuously transmitted across FM.

The user is less dependent on the half-hourly broadcast traffic information, because the signal is continuously transmitted. Apart from this, important information, as in the case of people driving on the wrong side of the road for example, can be passed on immediately.

The transmission is planned for the whole of Europe and is already offered by radio transmitters in many countries. The precision of the TMC messages can deviate greatly according to the country.

The evaluation of TMC messages is not supported by every type of navigation software. Enquire whether your system supports TMC before the possible purchase of a TMC receiver.

TMCPro (optional)

TMCpro (a service of T-Systems Traffic GmbH) mainly uses an automatic system to record the traffic situation, while the normal TMC relies on information from the police, ADAC and reports of traffic jams. Sensors on autobahn bridges, strips of sensors set into the carriageway and a large number of vehicles equipped with 'Floating Car Data' technology quickly supply a precise and more current image of the traffic situation on German autobahns, including predictions of possibilities.

Your navigation system will support both services and is set for the reception of both of them in the status at delivery.

Installing the External TMC Receiver / Connecting the TMC Diplole Aerial (optional)

Installing the External TMC Receiver

1. Connect the mini-USB plug to the mini-USB connection of your device.
2. Connect the projecting antenna to the TMC receiver and attach that antenna with the aid of the suckers, at the edge of your windscreen, for example.
3. Connect the TMC receiver to the car adapter cable after you have attached the TMC receiver to your navigation system.

Connecting the TMC Dipole Aerial

1. Plug the jack plug of the TMC angled aerial into the earphones connection of your navigation system.
2. Attach the aerial, on the edge or your windscreen, for example, with the help of the sucker.
3. Place the aerial so that a distance of approx. 10 cm from the metal frame of the screen is maintained.

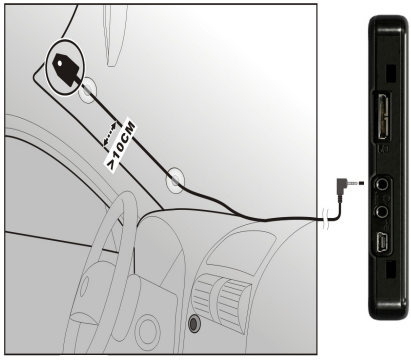

(similar pictures)

Your navigation system will now be able to receive traffic information through the TMC receiver and thus to avoid potential disruptions to traffic.

Working with Memory Cards

Your navigation system supports MMC and SD memory cards.

Inserting Memory Cards

1. Carefully take the **optional** memory card out of its packing (if included). Take care not to touch or dirty the contacts.
2. Insert the memory card carefully into the card bay with contacts pointing forward. The card must lock easily.

Removing Memory Cards

> **Note**
>
> Only remove the memory card if the navigation software has been closed and the device has been switched off by means of the On/Off button beforehand. Otherwise you will risk a loss of data.

1. To remove the card press lightly onto the upper edge until it ejects.
2. Pull the card out without touching the contacts.
3. Store the memory card in the packing or in another safe location.

> **Note**
>
> Memory cards are very fragile. Take care not to dirty the contacts and not to force the card.

Accessing Memory Cards

- The appliance only supports memory cards in the FAT16/32 file format. If you insert a card prepared with a different format (e.g. in cameras, MP3 players), your navigation
system may not recognize it and will ask you to format it again.

> **Attention!**
>
> Formatting the memory card irretrievably wipes out all data.

Data Exchange via Card Reader

If you wish to copy large quantities of data (MP3 files, navigation maps) to the memory card, these can also be stored directly to the memory card.

Many computers already have memory card devices. Insert the card in this and copy the data directly to the card.

Because of the direct access you can achieve a much higher transfer rate compared to using ActiveSync®.

Additional Card Material

Your navigation system is already equipped with digitalized map material in the internal memory and/or memory card at the factory. Depending on the configuration, additional maps may be included on your your navigation CDs/DVDs. You will be able to transfer these cards to a memory card immediately. Here, it is recommended to use an external card reader (see also page 84). The GoPal Assistant supplied with the device enables a simple and individual compilation of the map material to be transferred.

Depending on the amount of map data on the navigation CDs/DVDs, memory cards with capacities of 256 MB, 512 MB, 1.024 MB or more may be required.

You can obtain additional memory cards (MMC or SD cards) in specialist stores.

Transfer of card material to a memory card

The transfer of additional card material to a memory card can take place through the Explorer of your PCs. Proceed as follows:

1. Insert the CD/DVD with the card material required.
2. Start your workstation and select your CD/DVD Drive.
3. Copy the file with the **.psf** ending out of the Directory of the region that you require to the **MapRegions** Directory on your memory card, from the CD/DVD.

You can transfer several files with map material to your memory card, depending on the capacity of the memory card.

If you have copied digitized maps of several countries or country groups onto your memory card, you will be required to select the desired map in the navigation application of your device.

Alternative Installation of the Navigation Software from a Memory Card

The software for your navigation system can also be installed directly from a memory card.

The pre-installed software may have to be uninstalled beforehand (see special CleanUp function, Page 75).

You will be requested to install the navigation software during the initial adjustment. Please proceed as follows:

1. Remove the memory card from the packaging carefully. Pay attention that the contacts are not touched or soiled.
2. Push the memory card into the SD-/MMC slot until it engages.
3. Click on **OK**, in order to install the application.

The main screen, through which you will now be able to carry out the navigation settings, will appear after all data has been copied to your navigation system.

Transferring Installation Files and Map Material to the Internal Memory

> **Note**
>
> The navigation system must be connected to a computer by means of ActiveSync® for the transfer of the data.

Your device has an internal, permanent memory, which is located in the **\My Flash Disk** directory.

You will be able to make this directory, and others, visible with ActiveSync®, by means of the **Search** option. Directories and files can be manipulated as in Windows Explorer.

The required directory must have been stored, in order to make the installation files and the map material for the device available.

Deposit the **INSTALL** directory for the installation files at (\My Flash Disk\INSTALL). Deposit the map material in the **MapRegions** directory (\My Flash Disk\MapRegions). Please pay attention to the modes of lettering given above when naming the directories.

Pay attention to the fact that sufficient drive capacity must be available, if you have stored additional data on your navigation device. Remove files not needed if sufficient drive capacity is not available.

Mounting on (Bicycle) Handlebars (optional)

You can attach your navigation system to a bicycle as an **optional** additional feature. A special holder is needed to do this. The installation is explained in the following.

1. Release both the screws connecting the clamp to the holding plate with the hexagon key.
2. Remove the rubber ring and wind it around the handlebars.
3. Position the clamp on your bicycle handlebars, by pulling it across the handlebars from below.
4. Put the holding plate back onto the clamp and retighten both the screws.
5. Seat the holder for the navigation system on the holder plate until it locks into place audibly. Please pay attention to the fact that the holder must only be seated in **one direction**.

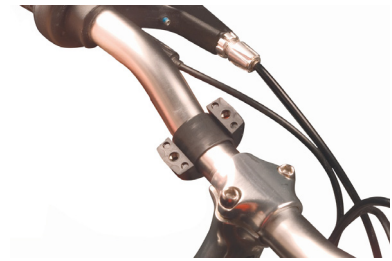

6. Now place the device on the holder. You must pay attention to firm positioning.

> **Note**
>
> Your navigation system could also be equipped with a different bicycle mounting, where the attachment of mountings can vary slightly, according to the version.

Specifications

Parameter	Information	
Power supply Mains adapter (optional) **Input** **Output**	**KTEC KSAFB0500100W1UV** 100-240V~ 50-60Hz + 5V 1.0A max.	
Power supply Power supply cable for a cigarette lighter **Input** **Output**	**Phihong CLA05D-050A** 12-24V, 1A max. 5V ⎓ 1A	
Earphones (optional)	Stereo earphones (3.5 mm)	
Memory card type	MMC and SD	
Bluetooth (depending on the model)	Class 2	
Connector type of the external GPS receiver	MMCX	
USB interface	USB 1.1	
Dimensions	approx. 124 mm x 82 mm x 17 mm	
Weight incl. battery	approx. 180 g (ohne Verpackung)	
Temperatures	Operating	+5° C - +40° C
	Storage	0° C - +60° C
Humidity (without condensation)	10 – 90 %	

Model Overview

Model	Bluetooth	TMC via external TMC receiver (via Mini USB)	TMC via integrated TMC receiver and dipole aerial
E4125	○	●	○
P4225	○	○	●
P4425	●	○	●

● = **Equipment available**

○ = Equipment not available

Conditions of Warranty for the United Kingdom

Restricted Warranty

I. General Conditions of Warranty

1. General

This warranty covers defects relating to workmanship and manufacture in MEDION products. The period during which this warranty is valid and during which claims against the warranty can be made to MEDION must be in accordance with the following terms in order to be considered eligible:

- Is effective from the date of purchase or receipt of the MEDION product from an authorised seller of MEDION products; and
- expires at the end of the warranty period specified on the warranty card provided with the product.

For the warranty to be valid, you must:

- provide suitable evidence of purchase, a copy of the original purchase receipt from an authorised seller of MEDION products is preferred; or
- register your product within 28 days of purchase either online at www.MEDION.co.uk or by completing and returning the pre-paid registration card included with the product.

Please keep the original purchase receipt and the warranty card in a safe place. MEDION and its authorised sellers reserve the right to refuse a repair under warranty or a warranty confirmation if a proof of purchase [or registration of purchase] cannot be established, or has not been, submitted.

When it is necessary to return your product for repair please ensure that your product is suitably packed for transportation.

Provided that your product is still within warranty (please check the duration of the warranty period as described above) and is eligible for repair or replacement under the terms of the warranty, to return your product, please telephone MEDION on the service hotline number. You will be sent a pre-paid transportation box suitable for returning your product to MEDION. PLEASE MAKE SURE THAT YOU HAVE A BACKUP COPY OF ALL DATA ON THE PRODUCT BEFORE RETURNING THE PRODUCT TO MEDION. MEDION shall bear the costs of postage and packaging for returning the product and the transportation risk. However, if following examination of the defective product in question, MEDION, in its reasonable opinion, considers that the defect has been caused by:

- your operating and/or using the product other than as instructed in the accompanying documentation;
- damage caused in transit as a result of your negligence in packaging of the product; and/or
- otherwise than in accordance with the terms of this warranty;

This warranty shall be void and you may be required by MEDION to reimburse MEDION for the reasonable costs of postage and packaging before MEDION will return the product to you. If so and you would still like MEDION to repair or replace the product, MEDION may do so but you will be charged MEDION's standard rates for repair and replacement for this service.

Before returning the product, please contact MEDION via the service hotline or via the internet (www.MEDION.co.uk). You will receive a reference number (RMA No.) on the warranty card. Please mark the outside of your package to ensure that this reference number is clearly visible. Please submit a letter containing as much detailed information as possible and, a full description of the defect or fault.

This should include:

- a description of the fault;
- when it occurred, how long it has been evident and how frequently it occurs;
- any errors message(s) displayed when using the product;
- a description of the circumstance(s) and conditions in which the fault occurs; and
- whether it is an intermittent or persistent fault;

This will greatly assist MEDION in identifying the defect, when submitted together with the defective product.

Unless otherwise instructed by a MEDION representative in all cases, the product must be returned complete with all parts which were included with the original product. Incomplete contents of the returned package may lead to a delay in the repair or replacement. MEDION does not accept any liability for any additionally submitted material(s) which were not supplied with the original MEDION product.

This warranty does not affect your statutory rights in any way and is subject to the applicable legal statutes of the country where the product was sold to you by an authorised MEDION seller.

2. Scope

Subject to any exclusions set out within this warranty, where there is a defect in your MEDION product covered by this warranty, MEDION will repair or replace the MEDION product. The decision whether to repair or replace the product will be made solely at the discretion of MEDION. MEDION may, in its own discretion, replace the product returned for repair under warranty with a replacement product that is either identical or, in the event that such product(s) are no longer available, a product of equal or superior specification and quality.

No warranty is given for batteries or rechargeable batteries or for consumable materials subject to wear and tear, i.e. for parts which have to be replaced periodically during the normal use of the product, such as video-projector lamp.

Non critical failures that fall within industry specified tolerances e.g. noise, LCD pixels are not covered by this warranty. Please consult the appropriate section in your user or instruction manual for this product for exact specifications and tolerances.

To the extent which is permitted under law, MEDION will accept no liability for burnt-in images on plasma or LCD products as a result of normal wear and tear during the operation of the product. Please refer to your user or instruction manual for this product for detailed operating instructions for your plasma or LCD product.

The warranty does not cover errors relating to the playback of data media in an incompatible format or created with unsuitable software.

If it is found during repair or assessment that the defect concerned is not covered under warranty, MEDION reserves the right to invoice you for all reasonable costs incurred by MEDION. These costs will be in relation to the return of the product, including reasonable administration costs, plus reasonable costs for materials used and labour provided when repairing or replacing the product. This is subject to MEDION providing you with an estimate for carrying out such work prior to costs being incurred and that you have accepted the estimate.

You are entitled to seek independent advice or consultation relating to your product or any of MEDION's findings. MEDION will not be liable for any costs incurred to you when doing so.

3. Exclusion from warranty

To the extent permitted by law, this warranty shall be void in the event that defects or loss caused by:

a. failure and damage resulting from the operation of the product in an environment other than that recommended in the accompanying user or instruction manual (e.g. in direct sunlight or in a damp room);
b. accidental damage;
c. use other than in accordance with the accompanying user or instruction manual;
d. modifications, conversions, expansions, maintenance and/or repairs made to the MEDION product by unauthorised repairers or use of unauthorised third party parts;
e. negligence;
f. virus attack or software errors; or
g. improper transportation or packaging during return of the product.

This warranty will also be considered void if labels or serial numbers of the product or of a component of the product are modified or made illegible.

To the extent permitted by law, MEDION shall; only be responsible for losses which are a reasonably foreseeable consequence of the relevant defect in the product; MEDION will not be responsible for any costs incurred in relation to software configuration; economic loss; loss of opportunity; loss of income; or loss of data or software arising out of its repair or replacement of a MEDION product under this warranty.

4. Service Hotline

Before returning the product to MEDION you must contact us using the service hotline or via the internet (www.MEDION.co.uk). You will receive further instructions for making your claim under warranty when you call.

The service hotline is available on 362 days in the year, including Sundays and bank holidays but excluding Christmas day, New Years Day and Easter day. The service hotline is subject to [national rate] telephone call charges. These charges are subject to change. The price of your call will be stated at the beginning of the call.

II. Special warranty conditions for MEDION PC, notebook, pocket PC (PDA) and navigation devices (PNA)

The following terms apply to MEDION PC, notebook, desktop, pocket PC and laptop products and optional items included with such products. If one of these items has a fault, you also have a warranty claim for its repair or replacement, from MEDION. The warranty covers the costs of materials and labour for repairing or replacing the defective MEDION product or the optional item in question.

Hardware connected to your product that was not produced or marketed by MEDION can invalidate the warranty if MEDION can reasonably demonstrate that damage to the MEDION product or of the optional item included with the delivery was caused by such hardware. You are entitled to seek independent advice or consultation relating to your product or any of MEDION's findings. MEDION will not be liable for any costs incurred to you when doing so.

This warranty is restricted in relation to any pre-installed operating system as well as to application programme software that is included with the MEDION product in question. This warranty is restricted as follows:

For pre-installed operating system as well as to application programme software included in the MEDION product, MEDION only guarantees the data media (e.g. the diskettes and CD-ROMs) upon which this software is delivered and warrants that such data media shall be free from material and processing defects for a period of 90 days from the date of purchase of the MEDION product from an authorised seller of MEDION. MEDION will replace defective data media free of charge.

Any claims in respect of defective pre-installed operating system as well as to application programme software are hereby expressly excluded and you should contact the relevant licensor or copyright owner of the defective software in question. MEDION does not guarantee that any software supplied with MEDION products will function without interruption, will be free from errors or that it will fulfil your requirements. MEDION does not guarantee the 100% accuracy of the maps provided with the Navigation device.

It may be necessary to delete all data in the product in order to repair the MEDION product. PLEASE MAKE SURE THAT YOU HAVE A BACKUP COPY OF ALL DATA ON THE PRODUCT BEFORE RETURNING THE PRODUCT TO MEDION. To the extent permitted by law, MEDION excludes all liability for loss of data and MEDION recommends in all cases that you back up all data on your MEDION product before returning the product to MEDION.

III. Special warranty conditions for repair on site or replacement on site

If a claim for repair or replacement on site is included within the terms of the warranty card provided with the product, the special warranty conditions for repair or replacement of your MEDION product on site apply.

The following provisions must be made by you for carrying out repairs or replacements on site:

- MEDION or its authorised personnel must have unrestricted, safe and immediate access to the products.
- Telecommunication facilities required by MEDION or its authorised personnel for proper execution of your order, for testing and diagnostic purposes and for remedying faults are provided by you at your own expense.
- You are responsible yourself for restoring the application software after the repair services have been carried out by MEDION or its authorised personnel.
- You must take all other necessary steps to enable MEDION or its authorised personnel to carry out your order properly.
- You are responsible yourself for connecting and configuring any existing external peripheral products after MEDION or its authorised personnel have carried out their repairs.
- The free cancellation period for repairs or replacements on site is 24 hours, thereafter our reasonable costs resulting from late or missing cancellation shall be invoiced at your expense.

Liability limitations

The contents of this manual are subject to unannounced changes caused by technical progress. Manufacturer and sales shall not be responsible for any damages which have been caused as a result of omissions or errors in the information provided in this manual.

Under no circumstances shall we be liable for any of the following:

1. Claims made against you by third parties based on loss or damage.
2. Loss or damage to your blanks, recordings or data.
3. Economic follow-on damage (including lost profit or savings) or associated damage even in the case that we have been informed of the possibilities of this type of damage.

In some countries the exclusion or limitation of accompanying or follow-on damage is not legally accepted so that the above limitations do not come into force.

Index

A

AC Adapter 18
Accessing Memory Cards 83
Additional card material 84
Aerial Orientation 34
AlarmClock (Wakeup function)
  Ending the application 68
  Interfaces 65
  Main screen 64
  Selecting an alarm signal 66
  Setting the system time 66
  Setting the volume 67
  Snooze function 68
Alternative installation of the navigation software from a memory card 85
Ambient temperature 2
Auto run 78
Auto start 78

B

Battery Operation 5
Bluetooth
  Main screen 51
  Making calls 53
  Pairing 52
  Starting 50

C

Cabling 4
Card reader 84
Care of the Display 6
CleanUp 75
CleanUp func 22
Components
  Left components 13
  Right components 12
Contact Viewer
  Bedienung 70
  Contact list 70
  Create contacts database 69
  Selection of addresses and phone numbers 72
  Visiting card 71
Copyright ii
Customer Service 74

D

Data exchange 84
Data Security 1
DC AutoSuspend 76

E

Earphone connector 11, 15
Electromagnetic Compatibility 3
EMC 3
Extension socket 11, 14
External aerial connection 10
External GPS antenna 80

F

FAQ 73
Fingerprint Sensor 23
  Changing the settings of a stored fingerprint 29
  Interfaces 29
  Storing a fingerprint 27
FM Transmitter
  Interfaces 43
  Main screen overview 42
  Selecting the frequency 44
  Starting 42
Front Components 9
Function button 12

G

GPS 80
  External GPS antenna 80

H

Holder with extension socket
  Back components 15
  Front view 14
Holding clip 14
Hotline 74

I

Initial set up
- Power supply....17
- Switching on the device....19
- Charging the battery....16
- Installing the navigation software ...20

L

Liability limitations....94
Loudspeaker....10

M

Main switch....13
Maintenance....6
Memory cards....83
Microphone....15
Microsoft® ActiveSync®....78
Mini-USB-Connector....11, 15
Model Overview....88
Mounting the navigation set on a bicycle....86
MP3 Player
- List of favourites....57
- Main screen....54
- Select title....56
- Bookmarks....57

N

Navigation
- Connecting the car adapter....38
- Mounting the car holder....35
- Navigationssystem befestigen....36
- Safety instructions....33
- Starting the navigation software....39

Note....i

O

Operating
- Switching on/off the device....21

Operating Environment....2

P

Password....i, 23, 30
Picture Viewer
- Main screen....58
- Operation....58

Q

Quality....ii

R

R&TTE....5
Recycling and Disposal....6
Reinigungsmittel....6
Repair....2
Reparatur....2
Reset....32
Reset opening....13
Resetting the navigation system
- Hard Reset....32
- Soft Reset....32

S

Safety and Maintenance....1
Safety instructions
- Navigation....33
- Connection....4
- Ambient Temperature....2
- Data security....1
- Operating environment....2
- Repair....2
- Power supply....4
- Cabling....4
- Battery operation....5
- Maintenance....6
- Care of the display....6
- Transport....7

SD/MMC Slot....12
Security....i, 23, 30
Serial Number....i
Service....ii
- Faults and possible causes....74
- Hotline....74

Specifications....87
Speech commands....45
Standards
- R&TTE....5

Starting the navigation software....39
Stylus....10
SuperPIN....i, 26, 30
Supplied Items....8
Synchronisation with the PC....78

T

TMC 81
Connecting the TMC Dipole Aerial .. 82
Installing the External TMC 82
TMC Connector 15
TMCPro 81
Touch Screen 9
Transfer of card material to a memory card 84
Transferring Installation Files and Map Material to the Internal Memory 85
Transport 7
Travelguide 63

U

UUID ..... i, 26, 30

V

Video Player
Main screen 61
Views
Back components 10
Bottom components 11
Front components 9
Top components 12
Volume - 12
Volume + ... 12

W

Warning function for traffic monitoring points 40
Warranty 89